

## CONTENT

## **Disposable Clothing**

#### 4 MICROMAX® VP

Bloodborne Pathogen and Chemical Protection

#### 6 CLEANMAX®

Cleanroom apparel – Clean Manufactured Non-Sterile or Clean Manufactured Sterile configurations

#### 16 MICROMAX® NS

Microporous protection from dirt, grease, grime and light chemical splash!

#### 18 MICROMAX® NS COOL SUIT

Breathable back panel maximizes comfort!

#### 20 MICROMAX®

Added durability for the toughest environments

#### 21 SafeGard™

Lightweight, breathable protection from 3 tough layers

#### 22 SafeGard™ ECONOMY

SafeGard Protection - Economical Design

#### 23 ZONEGARD®

Breathable, Lightweight Protection of Polypropylene

### **Chemical Clothing**

#### 24 CHEMMAX® 1

Your First Level of Chemical Protection

#### 26 CHEMMAX® 2

Quality, Value, Durability with the Proven Protection of Saranex® 23P Barrier Film

#### 38 CHEMMAX® 3

Advanced Chemical Protection for Industry, Emergency Response and Law Enforcement

#### 40 CHEMMAX® 4 PLUS

Superior, Advanced Chemical Protection. Now Supported by PermaSURE®

#### **42 INTERCEPTOR® PLUS**

First Line Defense Against Extreme Chemical Hazards. Now Supported by PermaSURE®

#### 45 COOLVEST™

**Chemical Suit Cooling Vest** 

## **FR Disposable Clothing**

#### 29 PYROLON® PLUS 2

Perfect for use over thermally protective and arc protective clothing!

#### 30 PYROLON® CRFR

Chemical Resistance and Flame Resistance in one Disposable Protective Garment

#### 32 PYROLON® CBFR

Advanced Chemical Barrier and Flame Resistance for the Highest Chemical Hold-Out

# 4 MICROMAX VP





34 PERMASURE®



#### **Resources**

- 2 Lakeland® World-Class Sales and Support
- 9 Tips for Cleanroom Apparel Selection
- 10 Sizing Guide and Critical Protection Data
- 11 Lakeland Brand Product Range Overview
- 12 Protection Levels and Seam Styles
- 14 Apparel Selection Guide
- 28 Disposable FR Guide
- 34 PermaSURE® Mobile-friendly on-line tool that models permeation rates!
- 44 Chemical Suit Options and Accessories

Note that it is up to the professionals responding to any industrial or viral environment to do a thorough hazard assessment based on the task to be performed and determine the complete PPE ensemble for the hazard(s) they will face.





# PROTECTING WORKING PROFESSIONALS SINCE 1982

Lakeland® Industries is a global manufacturer of personal protective equipment, specializing in Disposable and Chemical Protective Apparel, FR/AR Clothing and Protective Gear for First Responders.

For over 35 years Lakeland® has provided products to the working professionals in Electric and Gas Utilities, the Oil and Gas Industry, General Manufacturing, Public Safety and the Petrochemical sectors, keeping workers both safe and comfortable on the job.

## World-Class Sales and Support — all around the globe


At Lakeland® Industries, our number one priority is creating protective garments that protect your people from hazardous particulates, liquids and chemicals, blood, diseases, and even fire and arc flash. Throughout the world, Lakeland® products Protect Your People®.

It's what we do.

Headquartered in Ronkonkoma, New York, since 1982, and supported by a global team in over 18 countries around the world, you can trust our experience, our expertise, and most importantly, our proven track record of developing and delivering superior garments that provide the protection and performance you require on the job, every day.

Lakeland's customers worldwide have access to nearly 4 decades of our expertise developing and supplying products to the Oil and Gas, Petrochemical, Utility, Wind Energy, Healthcare, Cleanroom and hundreds of other Industries around the globe.

Lakeland's Team of Global Experts are ready to assist. Any application. Anywhere.

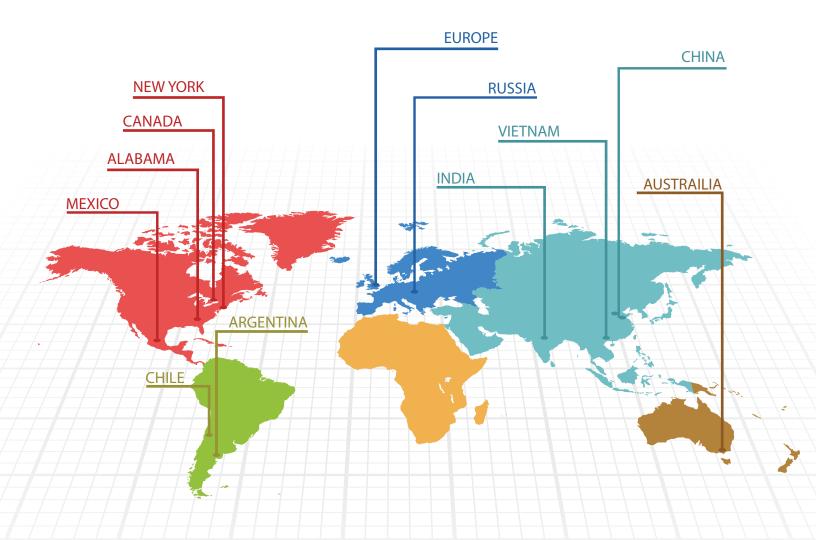



## **Global Manufacturing and Design -** supporting a worldwide customer network

Lakeland® Industries' products have established and maintained a global reputation for overall quality and are recognized as the industry's gold standard. We design and manufacture a wide variety of technologically advanced protective clothing in our factories around the world.


With manufacturing facilities in the United States, Mexico, China, Vietnam and India, Lakeland® is well positioned to source leading edge materials and produce the most advanced garments available to any region of the globe.

Lakeland's use of advanced technology doesn't stop with product development and design. Lakeland's customers have access to leading edge data and information to assist with proper product selection, calculate safe-use times and even model the effects of environmental changes and how they influence chemical permeation rates.

We Design, We Develop, We Manufacture, and We Deliver.

All to Protect Your People®



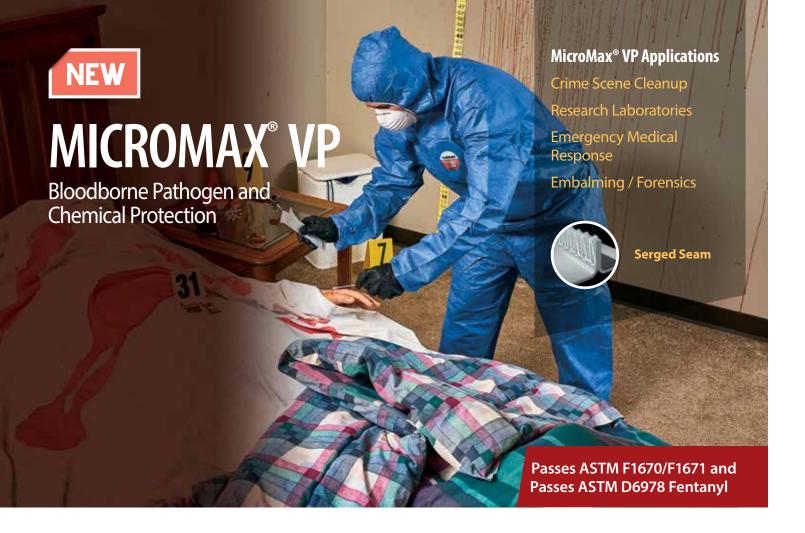

MicroMax®VP is specifically designed to protect when the risk of blood, body fluids, bloodborne pathogens and viral contamination are the greatest. Ideal for use in crime labs, crime scene clean up and by emergency response personnel.

· Protective hood

Acetonitrile

- Seamless front reduces risk of contaminant exposure
- Taped storm flap protects zipper
- Elastic back for more comfortable fit
- Passes ASTM F1670/F1671 for Blood and Viral Protection

MicroMax® VP Fabric Liquid Penetration Data

| VIICIOIVIAX VF FADI  | MicroMax® VP Fabric Physical Properties |       |   |  |  |  |  |  |  |
|--|---|-------|---|--|--|--|--|--|--|
| Physical Property  | Test Method                             | Units | Test Results  |  |  |  |  |  |  |
| Material Thickness   | ASTM D1777                              |       | 15 mil  |  |  |  |  |  |  |
| Material Weight  | ASTM D3776                              |       | 80 gsm  |  |  |  |  |  |  |
| Tensile Strength MD  | ASTM D5034                              | lbs.  | 36.30 lbs.  |  |  |  |  |  |  |
| Tensile Strength CD  | ASTM D5034                              | lbs.  | 24.15 lbs.  |  |  |  |  |  |  |
| Elongation MD  | ASTM D5034                              | %     | 59 Avg.   |  |  |  |  |  |  |
| Elongation CD  | ASTM D5034                              | %     | 71 Avg.   |  |  |  |  |  |  |
| Water Vapor Transmission Rate  | ASTM E96                                |       | 16 g/sq.<br>meter/ 24 hrs.<br>avg.                                      |  |  |  |  |  |  |
| Bursting Strength<br>Hydraulic Method  | ISO 13938-1                             |       | 29.4 psi avg.   |  |  |  |  |  |  |
| Burn Test 45°  | CPSC16 CFR<br>1610                      |       | Pass  |  |  |  |  |  |  |
| Surface Resistance<br>Requirement for BS<br>EN1149-5:2008 is $\leq$ 2.5<br>$\times$ 10 <sup>9</sup> $\Omega$ . | EN1149                                  | Ω     | The test<br>sample<br>meets the<br>requirement<br>2.4 X 10 <sup>8</sup> |  |  |  |  |  |  |

| Physical Property   | <b>Test Method</b>     | <b>Test Results</b> |  |  |  |  |  |
|---|------------------------|---------------------|--|--|--|--|--|
| Liquid Penetration Using Synthetic<br>Blood               | ASTM F1670             | Pass                |  |  |  |  |  |
| Viral Penetration using φX174<br>bacteriophage suspension | ASTM F1671             | Pass                |  |  |  |  |  |
| MicroMax® VP Fabric ASTM F903<br>Liquid Penetration Data  |                        |                     |  |  |  |  |  |
| Physical Property   | <b>Test Method</b>     | Test Results        |  |  |  |  |  |
| Methanol  | ASTM F903              | Pass                |  |  |  |  |  |
| Ethyl Acetate   | ASTM F903              | Pass                |  |  |  |  |  |
|   |                        |                     |  |  |  |  |  |
| Sulfuric Acid (97%)                                       | ASTM F903              | Pass                |  |  |  |  |  |
| Sulfuric Acid (97%) Tetrahydrofuran                       | ASTM F903<br>ASTM F903 | Pass<br>Pass        |  |  |  |  |  |
|   |                        |                     |  |  |  |  |  |
| Tetrahydrofuran   | ASTM F903              | Pass                |  |  |  |  |  |

ASTM F903

Pass

For Fentanyl Test Results using ASTM D6978 refer to page 10

## **MicroMax® VP - Premium Protection from High-Risk Contaminants!**





#### All Lakeland® CleanMax® Apparel is:

- IEST-RP-CC003 Category I Particle Cleanliness
- Latex and Silicone Free
- Compatible with ISO Class 4 -8 Cleanrooms and all Controlled Environments
- Individually packaged and protective outer bag for ante areas
- Resistant to blood and body fluid penetration
- Resistant to viral penetration
- Resistant to Blood Borne Pathogens
- Chemical Penetration Resistance to oils, bleach and 50% Sodium Hydroxide



#### **Bound Seams**

CleanMax® garments feature bound seams, which are precisely sewn with an additional outer binding. This increases seam strength and provides a better barrier from particulates than simple serged seams.

#### **CleanMax® Fabric Physical Properties**

| Test Method | Units   | Results   |
|-------------|---|---|
| ASTM D3776  | oz/y²   | 1.55 oz/y <sup>2</sup>  |
| ASTM D5034  | lbs.  | 22.0 lbs.   |
| ASTM D5034  | lbs.  | 14.0 lbs.   |
| ASTM D1117  | lbs.  | 9.0 lbs.  |
| ASTM D1117  | lbs.  | 5.8 lbs.  |
| ASTM D3787  | lbs.  | 19.0 lbs.   |
| ASTM D737   | cfm   | <0.562 cfm/ft <sup>2</sup>  |
| ASTM 96-80  | g/m²-<br>24hrs  | 663.38  |
| ASTM F2101  | %   | 99.999%   |
| ASTM F2299  | %   | 99.999%   |
|             | ASTM D3776 ASTM D5034 ASTM D5034 ASTM D1117 ASTM D1117 ASTM D3787 ASTM D737 ASTM D737 ASTM P6-80 ASTM F2101 | ASTM D3776 oz/y²  ASTM D5034 lbs.  ASTM D5034 lbs.  ASTM D1117 lbs.  ASTM D1117 lbs.  ASTM D3787 lbs.  ASTM D737 cfm  ASTM D6-80 g/m²-24hrs  ASTM F2101 % |

Both CleanMax® Clean Manufactured Non-Sterile and CleanMax® Clean Manufactured Sterile meet IEST-RP-C003 Category I particulate cleanliness standards and are ready for immediate use in ISO Class 4 – 8 Cleanrooms

Lakeland® Industries has spent over 30 years being an industry leader protecting people in the workplace and now we've extended our expertise to protect both your people and your cleanroom and/or controlled environment. CleanMax<sup>®</sup> is a high-quality microporous laminate material that is lightweight and breathable but is impervious to liquids, harsh chemicals and microorganisms.

Both CleanMax® Clean Manufactured Non-Sterile and CleanMax® Clean Manufactured Sterile meet IEST-RP-C003 Category I particulate cleanliness standards and are ready for immediate use in ISO Class 4 – 8 Cleanrooms. All sterile garments are gamma radiation sterilized to a level of 10<sup>-6</sup> SAL (Sterility



Assurance Level). These garments provide excellent comfort as well as protection, so you can easily don and doff your garments to reduce excursions and risk of contamination.

#### Clean Sterile Garments and **Packaging**

CleanMax® Clean Manufactured Sterile aarments are sterile to a sterility assurance level of 10<sup>-6</sup> SAL, and are compatible with ISO Class 4-8 Cleanrooms and all **Controlled Environments** 



#### **CleanMax® Configurations**




CTL191



CTL417



CTL428

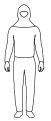

CTL713



CTL903



#### **Clean Manufactured Non-Sterile Garments**

#### Frock - CTL191CM

- · Mandarin collar
- Zipper closure No pockets
- Tunneled elastic wrists with thumb loops

Sizes: M - 5X Case Pack: 30

#### Coverall -CTL417CM

- Zipper closure
- Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist Sizes: M – 5X

Case Pack: 25

#### Coverall -CTL428CM

- Zipper closure
- Attached hood • Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist

Sizes: M - 5X Case Pack: 25

#### Hood - CTL713CM

- Covers shoulders
- One size
- · Ties to customize fit Case Pack: 100

#### Boot Cover -CTL903CMP

- Tunneled elastic top
- 19" high
- Non-skid Vinyl sole Sizes: S/M, L/XL, 2X Case Pack: 50 pair

#### Sleeve CTL850CMP-18

CTL850

- Bound seams
- Tunneled elastic
- Thumb loops Size: 18" length Case Pack: 50 pair

#### Clean Manufactured Sterile Garments STERILE R



Irradiation Sterilization

#### Clean Sterile

- · Certificate of Radiation included
- Gamma radiation indicator dots on
- each package IPA resistant ink

#### Coverall – CTL417CS

- Zipper closure Tunneled elastic on
- wrists (with thumb loops), ankles, and back half of waist Sizes: M - 5X Case Pack: 25

#### Coverall -CTL428CS

- Zipper closure Attached hood
- Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist Sizes: M - 5X

Case Pack: 25

#### Hood - CTL713CS

- Covers shoulders One size
- · Ties to customize fit Case Pack: 100

#### Boot Cover -CTL903CSP

- Tunneled elastic top
- 19" high
- Non-skid Vinyl sole Sizes: S/M, L/XL, 2X Case Pack: 50 pair

#### Sleeve CTL850CSP-18

- Bound seams
- Tunneled elastic
- Thumb loops
- Size: 18" length Case Pack: 50 pair

**CleanMax**® Features and Benefits

#### **Clean Manufactured Garments**

Garments that are clean manufactured offer significantly less particle counts in contrast to garments that are not clean manufactured.

#### Smooth Storm Flap for Added Level of Protection

Very few disposable cleanroom garments have the added protection of a placket storm flap. Covering the zipper further protects the critical chest and front area of the garment from potential particulate breakthrough. Additionally, our storm flap has finished seams so there are no exposed raw edges.

#### **Thumb Loops**

Plastic wrists with thumb loops help secure the coveralls and frocks in place to prevent the potential exposure of skin while worn during normal activities.

## Chemical Penetration Resistance

CleanMax® offers chemical penetration resistance to oils, bleach and 50 percent sodium hydroxide.

#### Premium Packaging Means Less Wrinkles, Less excursions

Garments are individually packaged and expertly folded to prevent excessive wrinkling and the potential for increased excursions.

Get the added safety of CleanMax®, which offers resistance to blood and body fluid penetration, viral penetration and bloodborne pathogens!



#### All bound seams

CleanMax® garments feature bound seams, which are precisely sewn with an additional outer binding. This increases seam strength and provides a better barrier from break through and protection from strike through than simple serged seams.

## Smooth surface area prevents particles from sticking

CleanMax® garments are smoother than other leading brands, which means particulates are less likely to harbor on the garment surface.

## Cuffed ankle allows for six inches of freedom

Expertly folded to reduce surface contamination during the donning process, the cuffed ankle provides six inches of freedom when you are stepping into the gown



# Download our FREE Disposable Cleanroom Garment Guide!



lakeland.com/us/cleanroom-guide

## **Disposable Cleanroom Suits:** Tips for Cleanroom Apparel Selection

Confidence in your cleanroom starts with understanding how to select the right disposable apparel for your unique needs. Part of the benefit of working with Lakeland® is ongoing access to our team of cleanroom industry experts. In just a few minutes, we will work with you to determine the type of garment required for your application and environment, and discuss how we can help you protect your team effectively with clean-manufactured garments.

#### Applications for CleanMax® Cleanroom Apparel

#### CleanMax® Clean Manufactured Sterile

- Aseptic or Terminally Sterile Cleanroom Environments
- ISO Class 4-8 Cleanroom
- Sterility assurance level of 10<sup>-6</sup> SAL

#### CleanMax® Clean Manufactured Non-Sterile

 ISO Class 4-8 or below Non-Aseptic Cleanrooms or Controlled Environments


#### **Garment Configurations**

| Apparel                            | ISO 8   | ISO 7   | ISO 6   | ISO 5<br>Non-Sterile | ISO 5<br>Sterile<br>(Aseptic) | ISO 4     | ISO 3     |           |
|------------------------------------|---------|---------|---------|----------------------|-------------------------------|-----------|-----------|-----------|
| Hair cover                         | R       | R       | R       | R                    | R                             | R         | R         | AS        |
| Barrier gloves                     | AS      | AS      | AS      | AS                   | R                             | R         | R         | R         |
| Facial cover                       | AS      | AS      | AS      | R                    | R                             | R         | R         | AS        |
| Hood                               | AS      | AS      | AS      | R                    | R                             | R         | R         | AS        |
| Frock                              | R       | R       | AS      | AS                   | NR                            | NR        | NR        | NR        |
| Coverall                           | AS      | AS      | R       | R                    | R                             | R         | R         | R         |
| Shoe cover                         | R       | R       | AS      | AS                   | NR                            | NR        | NR        | NR        |
| Boot                               | AS      | AS      | R       | R                    | R                             | R         | R         | R         |
| Typical<br>Frequency of<br>Change* | 2X/week | 2X/week | 3X/week | 1X/day               | Per Entry                     | Per Entry | Per Entry | Per Entry |

Chart shows Lakeland® garments relevant to ISO 5. Recommendations from IEST-RP-CC003. **R** = Recommended, **NR** = Not Recommended, **AS** = Application Specific


#### CleanMax® vs. Reusables: Which is Better?

Each time a cleanroom garment is handled, a chance for contamination occurs. A reusable garment goes through multiple steps in the laundering process leading to greater risk of contamination.

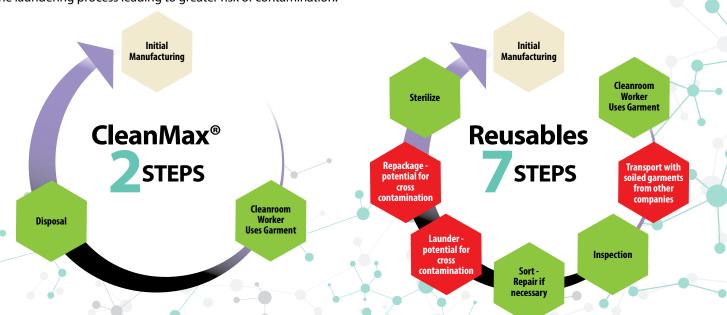

Choose Lakeland® CleanMax® and feel secure in your investment in your most critical assets; your people, your controlled environment and your product

## **Lakeland® Brand Disposable/Chemical Sizing Guide**

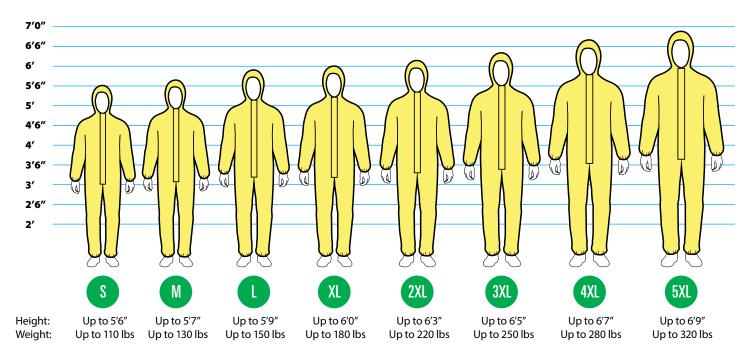

The above chart is a suggested guide for garment selection. Proper fit varies with individual body shape and allowances should be made for clothing that will be worn underneath the garment. Always choose the larger size should you fall in between the suggested guidelines or are uncertain on which size to select.

#### **Critical Protection** - Tested Performance

| Hazard Type   | Lakeland® Brand | Test Method   | Test Results                 |
|---|-----------------|---|------------------------------|
| Dia ad and Infantiana Ament                           | Minua Maur® NIC | ISO 16604:2004 Protection against Blood and Body Fluids                 | Pass Class 6 (Maximum Level) |
| Blood and Infectious Agent                            | MicroMax® NS    | ISO 22611:2003 Protection against<br>Biologically Contaminated Aerosols | Pass Class 3 (Maximum Level) |
| Dia adhawa Datharana                                  | MicroMax® NS    | ASTM F1670 Liquid Penetration to Synthetic Blood                        | Pass                         |
| Bloodborne Pathogens                                  | MicroMax® VP    | ASTM F1671 Viral Penetration φX174<br>Bacteriophage Suspension          | Pass                         |
| Pesticide Protection                                  | MicroMax® NS    | ASTM F903 Penetration Testing –<br>Diazinon (Roundup)                   | Pass                         |
| Isocyanate Based Paint                                | MicroMax® NS    | ASTM F903 Penetration Testing   | Pass                         |
| Ammonia – 99% Anhydrous Gas<br>(CAS Number 7664-41-7) | Pyrolon® CBFR   | ASTM F739 Permeation Testing  | >480 minutes                 |

## **Fentanyl** - Testing per ASTM D6978

| Lakeland <sup>®</sup> Brand | Test Drug and<br>Concentration             | Minimum<br>Breakthrough<br>Detection Time<br>(Specimen 1/2/3)<br>(Minutes) | Steady State<br>Permeation Rate<br>(Specimen 1/2/3)<br>(µg/cm2/minute) | Other Observations                 |
|-----------------------------|--|--|--|------------------------------------|
| MicroMax® VP*               | Fentanyl Citrate<br>Injection, 100 mcg/2mL | >240   | NA   | Slight swelling;<br>no degradation |
| ChemMax® 1**                | Fentanyl Citrate<br>Injection, 100 mcg/2mL | >240   | NA   | Slight swelling;<br>no degradation |

<sup>\*</sup> MicroMax\* VP fabric holds out liquid Fentanyl, but is only recommended for Fentanyl in powder form due to serged seam construction

Users should also ensure the gloves they are using for chemotherapy have been tested against the most recent standards. The current standard for exam gloves used in chemotherapy is ASTM D6978-05 "Standard Practice for Assessment of Resistance of Medical Gloves to Permeation by Chemotherapy Drugs.

Prior to ASTM D6978-05 many exam gloves were tested against ASTM F739 "Resistance of Protective Clothing Materials to Permeation by Liquids or Gases Under Conditions of Continuous Contact". ASTM D6978-05 uses ASTM F739 as a test method, but has a chemical permeation requirement that is 10 times more stringent than what is required by ASTM F739. Users of gloves tested under ASTM D6978-05 have a higher level of confidence that the gloves they are using are tested to the current, more stringent ASTM standard."



<sup>\*\*</sup> ChemMax® 1 has >240 min hold out for liquid Fentanyl; Taped/Sealed Seam Garments are recommended for Fentanyl in liquid form

**ZoneGard**®

| Interceptor® Plus     | Interceptor® Plus achieves the highest levels of chemical protection required for extremely hazardous areas, including Level A HazMat response. All supported by PermaSURE.  |
|-----------------------|--|
| ChemMax® 4 Plus       | ChemMax® 4 Plus fabric incorporates a 6 layer protective barrier system and is supported by the PermaSURE Toxicity Risk Modeler Software Application.  |
| ChemMax® 3            | ChemMax® 3 barrier film is soft and durable while providing superior protection from both chemicals and chemical warfare agents, all while backed by the PermaSURE database of 4,000+ chemicals.   |
| ChemMax® 2            | ChemMax® 2 fabric is built with the proven protection of Saranex 23P barrier film to provide superior and economical chemical protection.  |
| ChemMax® 1            | ChemMax® 1 fabric is comprised of a polyethylene (PE) barrier film and a continuous filament polypropylene nonwoven fabric. Lightweight and durable protection for most industrial acid and base chemicals.  |
| Pyrolon® CBFR         | Pyrolon® CBFR offers the highest level of chemical protection for harsh environments that also require Flame Resistant apparel due to flash fire concerns.   |
| Pyrolon® CRFR         | Pyrolon® CRFR fabric utilizes a 2.5 mil proprietary FR barrier film to provide chemical protection for primary FR/AR garments that won't melt or drip in a flash fire scenario.  |
| Pyrolon® Plus 2       | Pyrolon® Plus 2 provides highly breathable, secondary FR protection, to keep primary FR/AR garments free from contamination by dirt, grease, oil, hydraulic fluid and other dry particulate, aerosol and light liquid hazards.   |
| MicroMax® VP          | MicroMax®VP garments are specifically tailored for protection from the risk of blood, body fluids and bloodborne pathogens. ASTM F1670/F1671 for blood and viral and designed with no exposed seams or points for liquid penetration on the forward-facing portion of the garment.                                 |
| MicroMax <sup>®</sup> | The MicroMax® family of fabrics are all based upon a spunbond polypropylene layer with a laminated microporous film. Dry particulate filtration to 1.0 micron and passes ASTM F1670/F1671 for bloodborne pathogens make the MicroMax line ideal choice blood, grease, paint, pesticides and light chemical splash. |
| SafeGard™             | SafeGard™ fabric is a layering of Spunbond-Meltblown-Spunbond polypropylene filaments to provide breathable protection against aerosols and light liquids, as well as particle filtration down to 10.0 microns.  |
|                       |  |

dust and other dry particulates.

 $\textbf{ZoneGard} \ \textbf{°} \ \textbf{fabric} \ \textbf{is lightweight, highly breathable polypropylene fabric. Ideal protection for dirt,}$ 

## **Lakeland® Brand Protection Levels and Seam Styles**

|                         | General Protection      |                                 |                              |                                     | Aerosol/Spray                |                                |               |                          |
|-------------------------|-------------------------|---------------------------------|------------------------------|-------------------------------------|------------------------------|--------------------------------|---------------|--------------------------|
| Product<br>Applications | Dirt, Oil and<br>Grease | Hazardous<br>Dry<br>Particulate | Non-<br>Hazardous<br>Liquids | Welding,<br>Cutting and<br>Grinding | Non-<br>Hazardous<br>Liquids | Paint,<br>Hazardous<br>Liquids | Dry Particles | Flammable<br>Environment |
| MicroMax® NS            | •                       | •                               | •                            |                                     | •                            | •                              | •             |                          |
| MicroMax® NS Cool Suit  | •                       | •                               | •                            |                                     | •                            | •                              | •             |                          |
| MicroMax®               | •                       | •                               | •                            |                                     | •                            | •                              | •             |                          |
| MicroMax® VP            |                         |                                 |                              |                                     |                              |                                |               |                          |
| CleanMax®               |                         |                                 |                              |                                     |                              |                                |               |                          |
| SafeGard™ SMS           | •                       | •                               | •                            |                                     | •                            | •                              | •             |                          |
| Economy SMS             | •                       | •                               |                              |                                     | •                            | •                              | •             |                          |
| Pyolon® Plus 2 *        | •                       | •                               |                              | •                                   |                              | •                              | •             | •                        |
| ZoneGard® Polypropylene | •                       |                                 |                              |                                     | •                            |                                |               |                          |
| Pyrolon® CRFR *         |                         | •                               | •                            |                                     | •                            | •                              |               | •                        |
| Pyrolon® CBFR           |                         | •                               | •                            |                                     |                              |                                |               | •                        |
| ChemMax® 1              |                         | •                               | •                            |                                     | •                            | •                              | •             |                          |
| ChemMax® 2              |                         |                                 |                              |                                     | •                            | •                              | •             |                          |
| ChemMax® 3              |                         |                                 |                              |                                     |                              | •                              |               |                          |
| ChemMax® 4 Plus         |                         |                                 |                              |                                     |                              |                                |               |                          |
| Interceptor® Plus**     |                         |                                 |                              |                                     |                              |                                |               |                          |

<sup>\*</sup> Must be worn over thermally protective clothing, such as flame resistant cottons, aramids or mono acrylics.
\*\* Interceptor meets the requirements of NFPA 1991 limited flash fire for escape only option.

#### **Product Seam Availability**


| Product                 | Serged Seam | Bound<br>Seams | Heat Sealed<br>Seams | Heat Sealed<br>Plus Seams |
|-------------------------|-------------|----------------|----------------------|---------------------------|
| MicroMax® NS            | •           |                |                      |                           |
| MicroMax® NS Cool Suit  | •           |                |                      |                           |
| MicroMax®               | •           |                |                      |                           |
| MicroMax® VP            | •           |                |                      |                           |
| CleanMax®               |             | •              |                      |                           |
| SafeGard™ SMS           | •           |                |                      |                           |
| Economy SMS             | •           |                |                      |                           |
| Pyolon® Plus 2          | •           |                |                      |                           |
| ZoneGard® Polypropylene | •           |                |                      |                           |
| Pyrolon® CRFR           |             |                | •                    |                           |
| Pyrolon® CBFR           |             |                | •                    |                           |
| ChemMax® 1              | •           | •              | •                    |                           |
| ChemMax® 2              |             | •              | •                    |                           |
| ChemMax® 3              |             |                | •                    |                           |
| ChemMax® 4 Plus         |             |                | •                    |                           |
| Interceptor® Plus       |             |                | •                    | •                         |

The Seam You Choose is **Determined By Your Work Environment** and Your Potential Risk of Hazard Exposure!

|  | C                            | hemical Splas                  | h                    | Ha                  | Hazmat                  |             | Critical Environment / Biohazard |                          |                        |            |
|--|------------------------------|--------------------------------|----------------------|---------------------|-------------------------|-------------|----------------------------------|--------------------------|------------------------|------------|
|  | Low<br>Exposure,<br>Low Risk | High<br>Exposure,<br>High Risk | Flammable<br>Liquids | Hazmat,<br>Maritime | Hazmat<br>Non-Certified | Paint Booth | Bloodborne<br>Pathogens          | Waste Water<br>Treatment | Flash Fire<br>Chemical | Clean Room |
|  | •                            |                                |                      |                     |                         | •           | •                                | •                        |                        |            |
|  |                              |                                |                      |                     |                         | •           |                                  |                          |                        |            |
|  | •                            |                                |                      |                     |                         | •           | •                                | •                        |                        |            |
|  | •                            |                                |                      |                     |                         |             | •                                |                          |                        |            |
|  |                              |                                |                      |                     |                         |             |                                  |                          |                        | •          |
|  |                              |                                |                      |                     |                         |             |                                  |                          |                        |            |
|  |                              |                                |                      |                     |                         |             |                                  |                          |                        |            |
|  |                              |                                |                      |                     |                         |             |                                  |                          | •                      |            |
|  |                              |                                |                      |                     |                         |             |                                  |                          |                        |            |
|  | •                            | •                              | •                    |                     | •                       |             |                                  |                          | •                      |            |
|  | •                            | •                              | •                    |                     | •                       |             |                                  |                          | •                      |            |
|  | •                            | •                              |                      |                     | •                       | •           | •                                | •                        |                        |            |
|  | •                            | •                              |                      |                     | •                       | •           | •                                | •                        |                        |            |
|  |                              | •                              |                      | •                   | •                       |             | •                                | •                        |                        |            |
|  |                              |                                |                      |                     | •                       |             | •                                | •                        |                        |            |
|  |                              | •                              |                      | •                   | •                       |             |                                  |                          | •                      |            |




Serged Seam
Low Risk of
Hazardous Exposure

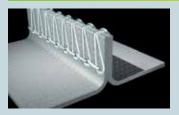

A serged seam joins two pieces of material with a thread that interlocks. This is an economical stitching method for general applications. This stitching method is generally not used for chemical protective clothing. It is more commonly found on disposable clothing where dry particulates are a concern.




**Bound Seam Moderate Risk** of
Hazardous Exposure

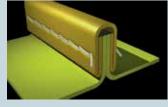

A bound seam joins two pieces of material with an overlay of similar material and is chain stitched through all layers for a clean finished edge. This provides increased holdout of liquids and dry particulates.




Heat Sealed Seam
High Risk of
Hazardous Exposure

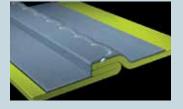

A heat sealed seam is sewn and then sealed with a heat activated tape. This method provides liquid proof seams, and is especially useful for Level A and B chemical protective clothing.



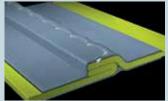


**Maximum Risk** of

**Hazardous Exposure** 

This is the ultimate and strongest seam that Lakeland® offers. The seam is sewn and then heat sealed on the outside and inside to offer the highest strength and chemical resistance.


## **Lakeland® Brand Apparel Selection Guide**

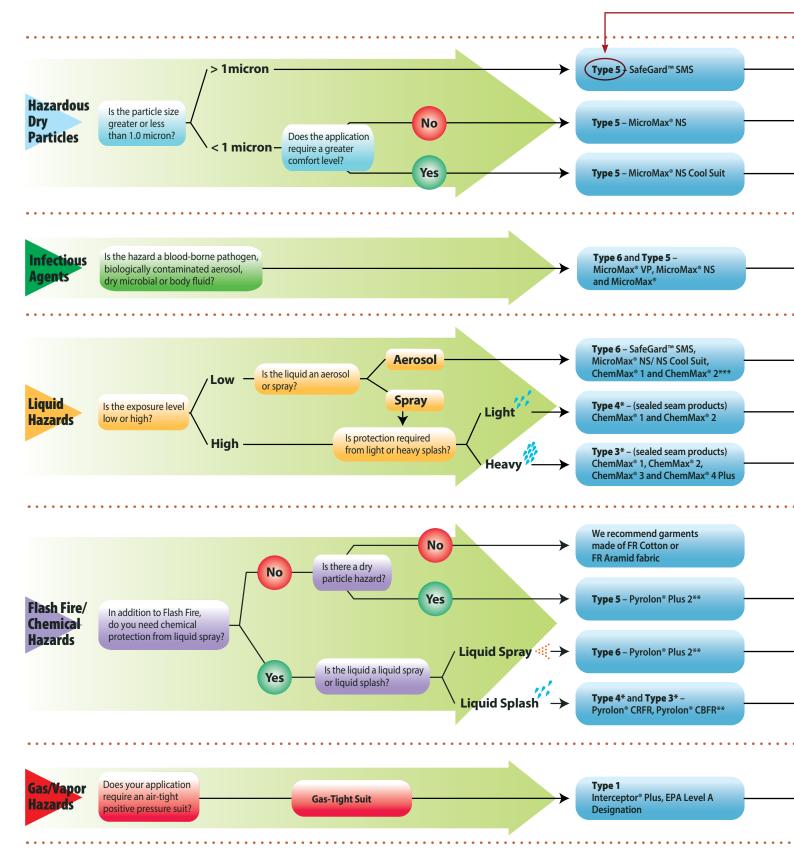

<sup>\*</sup> For details on Type 4 and Type 3 solutions, contact your Lakeland \*Sales Representative or call Customer Service at 800-645-9291.

 $<sup>{\</sup>color{blue}^{**}}\, \textbf{Must be worn over thermally protective clothing, such as fire resistant cottons, aramids or modacrylics.}$ 

<sup>\*\*\*</sup> Refer to permeation data for which ChemMax  $^{\circ}$  is indicated for a given hazard.

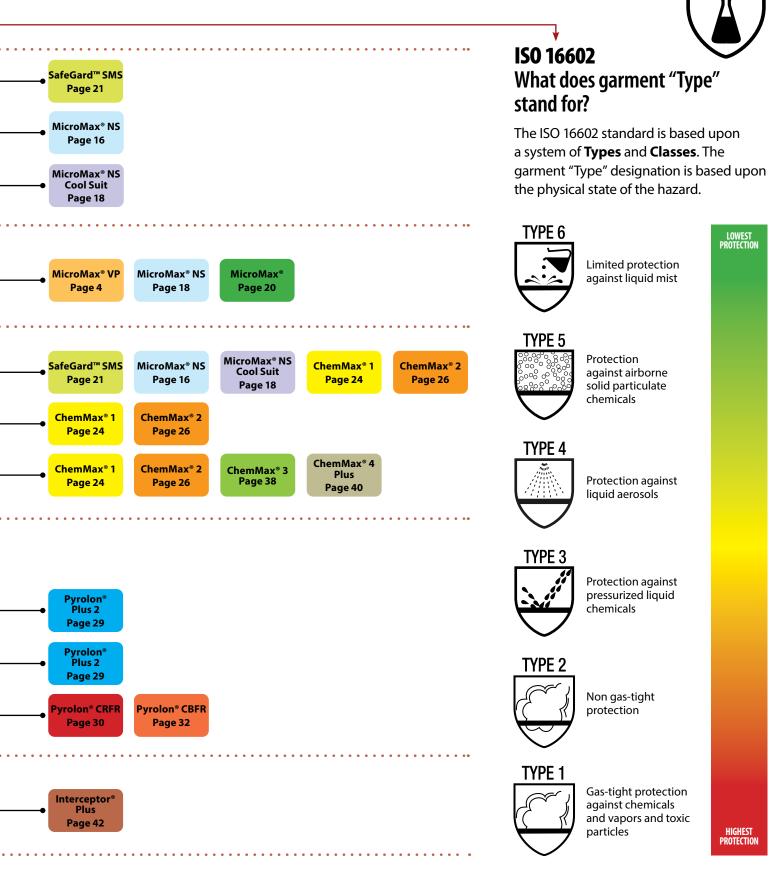

This is a general guide to selecting garments only and should not be used as the definitive or only tool in garment selection. It is the responsibility of the user to select garments or products which are appropriate for each intended use and which meet all specified government and industry standards.



#### MicroMax® NS Features:

- Economical
- Lightweight
- Features high MVTR (Moisture Vapor Transmission Rate)
- Protection from dry particulates and light liquid splash



## **Retail Vending Convenience Pack!**

Lakeland® now offers select styles of our MicroMax® NS coveralls in a convenient, vacuum-sealed package. Each pack contains a single coverall, ideally sized for



most vending applications, retail or showroom display, and conveniently sized to be a part of any specialty use or preparedness kit.

**Package Size**: Approximately 4.5" wide x 6.6" high x 2" deep **Available Sizes**: SM – 5X

Packaging: 50 individual packs per case

**Available Styles:** 

CTL412V, CTL414V, CTL417V, CTL428V

#### MicroMax® NS Fabric Physical Properties

| Physical Property   | Test Method | Units             | Test Results                   |
|---------------------|-------------|-------------------|--------------------------------|
| Basis Weight        | ASTM D3776  | oz/y <sup>2</sup> | 1.55 oz/y <sup>2</sup>         |
| Grab Tensile MD     | ASTM D5034  | lbs.              | 22.0 lbs.                      |
| Grab Tensile XD     | ASTM D5034  | lbs.              | 14.0 lbs.                      |
| Trapezoidal Tear MD | ASTM D1117  | lbs.              | 9.0 lbs.                       |
| Trapezoidal Tear CD | ASTM D1117  | lbs.              | 5.8 lbs.                       |
| Ball Burst          | ASTM D3787  | lbs.              | 19.0 lbs.                      |
| Air Permeability    | ASTM D737   | cfm               | <0.562 cfm/<br>ft <sup>2</sup> |
| Surface Resistance  | EN1149      | Ω                 | Pass                           |

#### MicroMax® NS Fabric ASTM F903 Penetration Data

| tion %        | Time –<br>Minutes                | Test Results   |
|---------------|----------------------------------|--|
| 100%          | 60                               | Pass   |
| 50%           | 60                               | Pass   |
| 10%           | 60                               | Pass   |
| iter – 3.20 x | Assay<br>Results<br>PFU/mL<br><1 | Pass   |
|               | 100%<br>100%<br>100%<br>50%      | 100% 60<br>100% 60<br>100% 60<br>100% 60<br>50% 60<br>10% 60<br>allenge Fluid Assay Results PFU/mL |

#### **MicroMax® NS Configurations**



Lab Coat CTL101

- Snap closure
- 2 pockets
- · Long sleeve Sizes: S – 5X Case Pack: 30



**Lab Coat CTL104** 

- Snap closure
- 2 pockets
- · Long sleeve
- Elastic wrists Sizes: S – 5X Case Pack: 30



Lab Coat **CTL112** 

- Snap closure
- No pockets · Long sleeve
- Elastic wrists Sizes: S – 5X Case Pack: 30



Lab Coat **CTL140** 

- Snap closure
- No pockets
- Long sleeves Sizes: S – 5X Case Pack: 30



Frock CTL190

- · Mandarin collar
- 5 snaps
- · No pockets • Elastic wrists
  - Sizes: S 5X Case Pack: 30



Frock **CTL191** 

- · Mandarin collar Zipper closure
- No pockets
- Elastic wrists Sizes: S - 5X Case Pack: 25




Shirt **CTL201** 

- Snap closure Long sleeves
- Sizes: S 5X Case Pack: 50



**Pants** CTL301

• Elastic waist Sizes: S - 5X Case Pack: 50

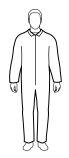

Coverall **CTL412** 


• Zipper closure **Sizes**: S – 5X Case Pack: 25



**CTL414** 

- Zipper closure

 Boots **Elastic wrists** Case Pack: 25

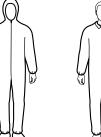

Coverall

- Attached hood

Sizes: S - 5X



Coverall **CTL417** 

- Zipper closure
- Elastic wrists
- · Elastic ankles Sizes: S - 5X Case Pack: 25



Coverall **CTL428** 

- Zipper closure Attached hood
- Elastic wrists
- Elastic ankles

Sizes: S – 5X Case Pack: 25




Apron CTL601

• Sewn ties Sizes: 28"w x 36" l Case Pack: 100



**Apron** CTL603


 Sewn ties Sizes: 28"w x 44"l Case Pack: 100

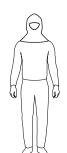

Hood CTL713

- Elastic face
- Covers shoulders • One size

Case Pack: 250

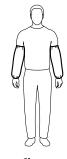

Sleeve CTL850P-18


• Elastic ends Sizes: 18" length Case Pack: 100 pair



**Shoe Cover** CTL901P 901NSP (non-skid)

- Elastic ankles
- Style 901 standard version • Style 901NS — gray non-skid


version Sizes: S/M, L/XL, 2X Case Pack: 200 pair

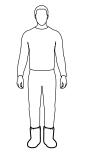

**Boot Cover** CTL903P 903NSP (non-skid)


- Elastic top
- 17" high
- Style 903 standard version
- Style 903NS gray non-skid version

Sizes: S/M, L/XL, 2X Case Pack: 200 pair

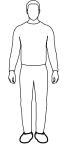

**Shoe Cover** CTL904P

 Vinyl sole Sizes: S/M, L/XL, 2X Case Pack: 200 pair

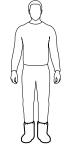

**Boot Cover** CTL905P

- Elastic top
- 17" high
- Vinyl sole Sizes: S/M, L/XL, 2X Case Pack: 200 pair

There is no detectable presence/absence of silicone using FTIR analysis for MicroMax NS fabric or other materials used in MicroMax NS garments such as elastic wrists and ankles, or zippers. All test method acceptance criteria were met. Test method STP0021 Rev 06 was performed in compliance with US FDA good manufacturing practice (GMP) regulations 21 CFR Parts 210, 211 and 820.



#### MicroMax® NS Cool Suit Features:

- SMS back panel increases breathablity and and provides a barrier to particulates and aerosol mist
- Elastic back waist provides improved comfort
- Front and sides material provides protection from dirt, liquids and light chemical splash
- · Storm flap over zipper protects against splashes




#### MicroMax® NS Cool Suit Configurations



Coverall COL412

Zipper closure
 Sizes: S – 5X
 Case Pack: 25

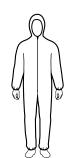


Coverall COL428

- Zipper closure
- Attached hood
- Elastic wrists
- Elastic ankles

Sizes: S – 5X Case Pack: 25

The Cool Suit breathable back panel provides efficient cooling while the front and sides offer light barrier protection from liquids and splash

## MicroMax® NS Cool Suit ... All-In-One Protection and Comfort!

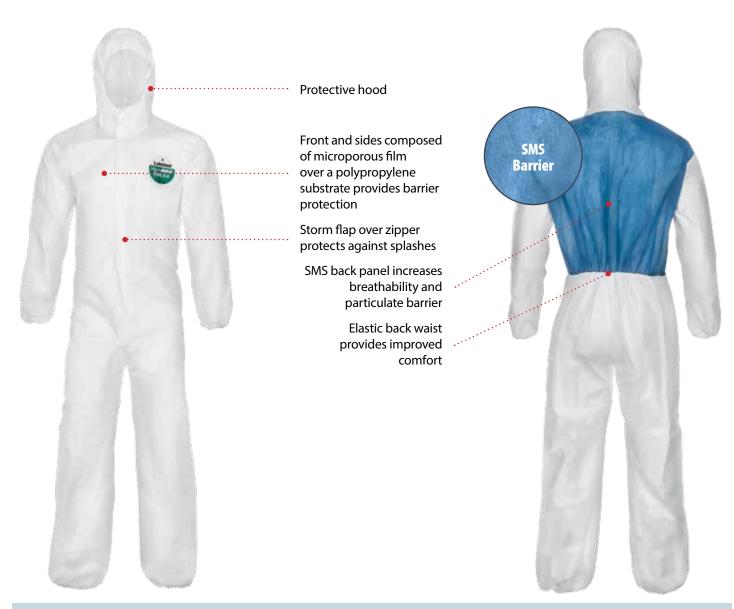

| MicroMax | NS Coo | l Suit Fabric | Physical | Properties |
|----------|--------|---------------|----------|------------|
|----------|--------|---------------|----------|------------|

| Physical Property      | Test Method | Units             | Test Results           |
|------------------------|-------------|-------------------|------------------------|
| Basis Weight           | ASTM D3776  | oz/y <sup>2</sup> | 1.85 oz/y <sup>2</sup> |
| Strip Tensile MD       | ASTM D5035  | lbs.              | 11.3 lbs.              |
| Strip Tensile XD       | ASTM D5035  | lbs.              | 6 lbs.                 |
| Tensile Strength MD    | ASTM D5034  | lbs.              | 24.4 lbs.              |
| Tensile Strength XD    | ASTM D5034  | lbs.              | 16.2 lbs.              |
| Trap/Tear MD           | ASTM D1117  | lbs.              | 10.8 lbs.              |
| Trap/Tear XD           | ASTM D1117  | lbs.              | 5.4 lbs.               |
| Ball Burst             | ASTM 3787   | lbs.              | 25.1 lbs.              |
| Taber Abrasion         | ASTM 3884   | cycles            | 1062 cycles            |
| Mocon-Breathability    |             |                   | 5031                   |
| Air Permeability       | ASTM D737   | cfm/ft2           | <0.562                 |
| Surface Resistance     | EN1149      | Ω                 | Pass                   |
| Hydrostatic Resistance | ASTM 4157   | cfm               | 127+                   |
| Flammability Pass      |             | lbs.              | 16 cfr 1610 cii        |

#### MicroMax® NS Cool Suit Fabric ASTM F903 Penetration Data

| Chemical Tested        | Concentra-<br>tion %                              | Test<br>Time –<br>Minutes        | Test<br>Results |
|------------------------|---|----------------------------------|-----------------|
| Diazinon (Roundup)     | 100%  | 60                               | Pass            |
| Motor Oil-40 wt.       | 100%  | 60                               | Pass            |
| Bleach-household       | 100%  | 60                               | Pass            |
| Isocyanate Based Paint | 100%  | 60                               | Pass            |
| Sodium Hydroxide       | 50%   | 60                               | Pass            |
| Sodium Hypochlorite    | 10%   | 60                               | Pass            |
| Blood                  | Challenge Fluid<br>Liter – 3.20 x<br>108 (PFU/mL) | Assay<br>Results<br>PFU/mL<br><1 | Pass            |



#### MicroMax® Features:

- Rip-stop nylon scrim adds strength and durability
- Liquid under pressure will not pass through fabric
- Ideal for Isocyanate paint
- Proven protection for Pesticide Spraying

#### MicroMax® Configurations



Coverall TG412

• Zipper closure Sizes: S – 5X Case Pack: 25



Coverall TG414

- Zipper closure
- Attached hood Boots

**Elastic wrists** Sizes: S – 5X Case Pack: 25



Coverall TG417

- Zipper closure
- Elastic wrists
- Elastic ankles Sizes: S – 5X Case Pack: 25



Coverall TG428

- Zipper closure
- Attached hood Elastic wrists
- Elastic ankles Sizes: S - 5X Case Pack: 25

#### MicroMax® Fabric Physical Properties

| Physical Property   | Test Method | Units             | Test Results           |
|---------------------|-------------|-------------------|------------------------|
| Basis Weight        | ASTM D3776  | oz/y <sup>2</sup> | 2.10 oz/y <sup>2</sup> |
| Grab Tensile MD     | ASTM D5034  | lbs.              | 32.4 lbs.              |
| Grab Tensile XD     | ASTM D5034  | lbs.              | 32.6 lbs.              |
| Trapezoidal Tear MD | ASTM D5733  | lbs.              | 5.1 lbs.               |
| Trapezoidal Tear CD | ASTM D5733  | lbs.              | 6.2 lbs.               |
| Surface Resistance  | EN1149      | Ω                 | Pass                   |

#### MicroMax® Fabric ASTM F903 Penetration Data

| Chemical Tested        | Concentra-<br>tion %                              | Test<br>Time –<br>Minutes        | Test<br>Results |
|------------------------|---|----------------------------------|-----------------|
| Diazinon (Roundup)     | 100%  | 60                               | Pass            |
| Motor Oil-40 wt.       | 100%  | 60                               | Pass            |
| Bleach-household       | 100%  | 60                               | Pass            |
| Isocyanate Based Paint | 100%  | 60                               | Pass            |
| Sodium Hydroxide       | 50%   | 60                               | Pass            |
| Sodium Hypochlorite    | 10%   | 60                               | Pass            |
| Blood                  | Challenge Fluid<br>Liter – 3.20 x<br>108 (PFU/mL) | Assay<br>Results<br>PFU/mL<br><1 | Pass            |



#### SafeGard™ Features:

- Deluxe pattern coveralls feature
  - hip pocket
  - chest pocket
  - elastic back
- · Aerosol mist protection
- Ideal for dry particulate
- Breathable Protection

#### SafeGard™ Fabric Physical Properties

| <b>Physical Property</b> | Test Method | Units             | Test Results          |
|--------------------------|-------------|-------------------|-----------------------|
| Basis Weight             | ASTM D3776  | oz/y <sup>2</sup> | 1.5 oz/y <sup>2</sup> |
| Grab Tensile MD          | ASTM D5034  | lbs.              | 25 lbs.               |
| Grab Tensile XD          | ASTM D5034  | lbs.              | 20 lbs.               |
| Trap Tear MD             | ASTM D5733  | lbs.              | 7.9 lbs.              |
| Trap Tear XD             | ASTM D5733  | lbs.              | 6.7 lbs.              |
|                          |             |                   |                       |


#### **SafeGard™ Configurations**



#### **Lab Coat C8101**

- Snap closure
- 2 pockets
- Long sleeve White only

**Sizes**: S − 5X Case Pack: 30

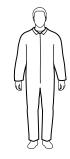

Coverall **C8412** 

• Zipper closure **Sizes**: S − 5X Case Pack: 25



Coverall **C8414** 

- Zipper closure
- Attached hood
- Boots
- Elastic wrists Sizes: S - 5X Case Pack: 25



#### Coverall **C8417**

- Zipper closure
- Elastic wrists • Elastic ankles

**Sizes**: S − 5X Case Pack: 25




Coverall **C8428** 

- Zipper closure
- Attached hood • Elastic wrists
- Elastic ankles Sizes: S - 5XCase Pack: 25



Most SafeGard™ SMS garments are available in white or Sky Blue. For Sky Blue, add

a "B" at the end of the style number.

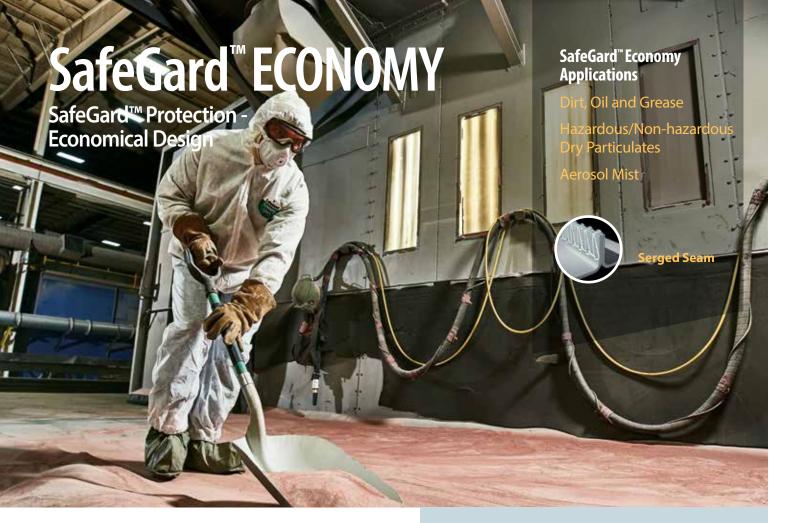


#### SafeGard™ Economy Features:

- SafeGard Protection Ideal for dry particulate and light aerosol mist
- Standard coverall design
- · Available in White or Blue

#### SafeGard™ Economy SMS Fabric Physical Properties


| D3776 oz/y <sup>2</sup><br>D5034 lbs. | 1.5 oz/y <sup>2</sup><br>25 lbs. |
|---------------------------------------|----------------------------------|
| D5034 lbs.                            | 25 lbs.                          |
|                                       |                                  |
| D5034 lbs.                            | 20 lbs.                          |
| D5733 lbs.                            | 7.9 lbs.                         |
| D5733 lbs.                            | 6.7 lbs.                         |
|                                       | D5733 lbs.                       |

#### **SafeGard™ Economy Configurations**

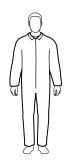

Coverall E8412

Zipper closure
 Sizes: S – 5X
 Case Pack: 25

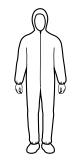

Coverall E8414

- Zipper closure
- Attached hoodBoots
- Elastic wrists
   Sizes: S 5X
   Case Pack: 25



Coverall E8417

- Zipper closure
- Elastic wristsElastic ankles
  - Sizes: S 5X Case Pack: 25



Coverall E8428

- Zipper closure
- Attached hood
- Elastic wristsElastic ankles

Sizes: S – 5X Case Pack: 25



All Economy SMS garments are available in White or Blue.

For Blue, add a "B" at the end of the style number



#### **ZoneGard® Features:**

- · Highly breathable
- · Great for dirty, grimy environments
- Economical

| Physical Property | Test Method | Units | Test Results           |
|-------------------|-------------|-------|------------------------|
| Basis Weight      | ASTM D3776  | oz/y² | 1.25 oz/y <sup>2</sup> |

#### **ZoneGard® Configurations**



Coverall

C2412
• Zipper closure Sizes: S – 5X Case Pack: 25



Coverall C2414

- Zipper closure Attached hood
- Boots
- Elastic wrists Sizes: S - 5X Case Pack: 25



Coverall C2417


- Zipper closure
- Elastic wrists
- Elastic ankles Sizes: S - 5X Case Pack: 25



Coverall **C2428** 


- Zipper closure
- Attached hood
- Elastic wrists • Elastic ankles

Sizes: S - 5X Case Pack: 25

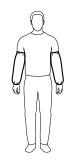


Sleeve C2850P-18

• Elastic ends Sizes: 18" length Case Pack: 100 pair

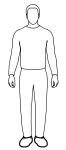

**Shoe Cover** C2901P

 Elastic ankles Sizes: S/M, L/XL, 2X Case Pack: 200 pair

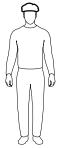


**Bouffant Hat** 801-21

• Bouffant hat Sizes: 21" Case Pack: 100



ZoneGard® coveralls are available in White or Navy. For Navy, add an "N" to the end of the style number

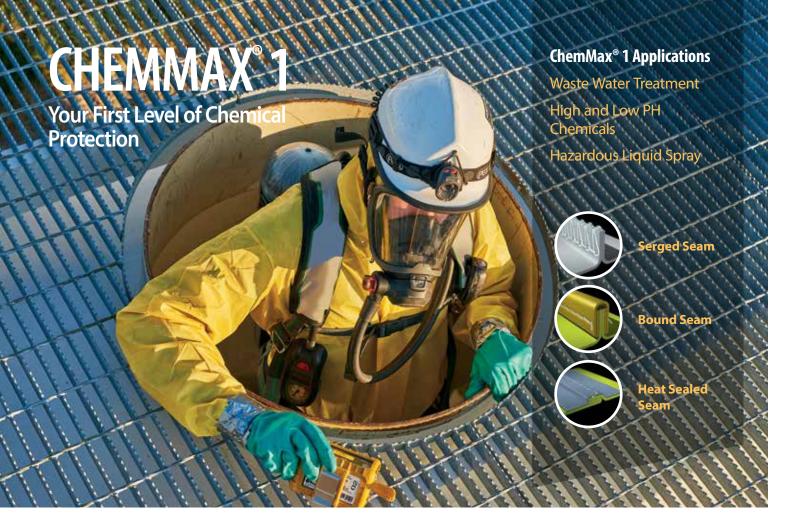

ChemMax® 1 is constructed with a unique polyethylene barrier film and a continuous filament polypropylene nonwoven fabric. ChemMax® 1 garments bar many harmful contaminants from penetrating to inner clothing. Available with serged, bound and sealed seams for scalability.

ChemMax® 1 provides economical, lightweight protection against most industrial acid and base chemicals. Bloodborne pathogen and viral protection make it a cost-effective option for waste water treatment facilities. ChemMax® 1 also meets the requirements of EN-1149 for Electrostatic Properties.

#### ChemMax® 1 Coveralls



Coverall
C1S412Y
Serged Seam
Zipper with storm

flap Sizes: S – 5XL Case Pack: 25



Coverall C1S414Y Serged Seam C1B414Y Bound Seam

- Zipper with storm

  flan
- Attached hood
- Attached boots
- Elastic wrists Sizes: S – 5XL Case Pack: 25



Coverall C1S417Y Serged Seam C1B417Y Bound Seam

- Zipper with storm

  flan
- flap
   Elastic wrists
- Elastic ankles
   Sizes: S 5XL
   Case Pack: 25



Coverall C1S428Y Serged Seam C1B428Y Bound Seam

- Zipper with storm flap
- Attached hoodElastic wrists
- Elastic ankles Sizes: S – 5XL Case Pack: 25



Coverall C1T110Y Sealed Seam

- CollarStorm flap over
- zipper.
   Elastic wrists
- Elastic ankles Sizes: S — 5XL Case Pack: 6



Coverall C1T130Y Sealed Seam

- Zipper with storm flap
- Elastic faceElastic wrists
- Elastic ankles Sizes: S – 5XL Case Pack: 6



Coverall C1T150Y Sealed Seam

- Zipper with storm flap
- Attached hood
- Elastic wrists
- Attached boots
   Sizes: S 5XL
   Case Pack: 6



Coverall C1T151Y Sealed Seam

- Respirator-fit hood
- Storm flap over
- zipper
- Elastic face and wrists
- Attached boots
   Sizes: S 5X
   Case Pack: 6

#### ChemMax® 1 Brand Features

Infectious Disease and Bloodborne Pathogen tested (sealed seam configuration)

Available in multiple seam configurations

Excellent Protection for High and Low PH Chemicals (Acids and Bases)

Passes ASTM D6978 Fentanyl

#### **ChemMax® 1 Configurations**




C1S527Y

- Open back
- Long sleeve
   Flastic wrist
- Elastic wrists
- Sewn ties Sizes: 30" x 40" Case Pack: 6



C1S650Y
• Sewn ties
Sizes: 28" x 36"
Case Pack: 100

**Apron** 

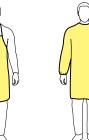


Apron C1B657Y


- Long sleevesWaist ties
- Sizes: 28" x 53" Case Pack: 50



C1S850YP-18
• Elastic ends
Sizes: 18" length
Case Pack: 100 pair

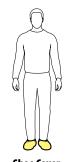

Shoe Cover C1S901YP • Elastic ankles Sizes: S/M, L/XL, 2X Case Pack: 200 pair

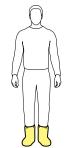

Boot Covers C1S903YP Serged Seam • Elastic top

• 17" high Sizes: S/M, LG/XL, 2X Case Pack: 200 pair

#### **ChemMax® 1 Fabric Physical Properties**

| Property            | Test Method     | Units      | Test<br>Results |
|---------------------|-----------------|------------|-----------------|
| Basis Weight        | ASTM D3776      | oz./sq. yd | 2.29            |
| Grab Tensile MD     | - ASTM D5034 -  | pounds     | 35              |
| Grab Tensile XD     |                 | pounds     | 27              |
| Trapezoidal Tear MD | – ASTM D5733    | pounds     | 13.8            |
| Trapezoidal Tear XD | — ASTIVID5/33 · | pounds     | 14.2            |
| Ball Burst          | ASTM D751       | pounds     | 25.5            |

## Permeation Data for ASTM Recommended List of Chemicals for Evaluating Protective Clothing Materials (ASTM F1001)

| Challenge Chemical    | CAS<br>Number | Physical<br>State | Normalized<br>Breakthrough |
|-----------------------|---------------|-------------------|----------------------------|
| Acetone               | 67-64-1       | Liquid            | >480                       |
| Acetonitrile          | 75-05-8       | Liquid            | >480                       |
| Ammonia Gas           | 7664-41-7     | Gas               | imm.                       |
| 1,3-Butadiene Gas     | 106-99-0      | Gas               | imm.                       |
| Carbon Disulfide      | 75-15-0       | Liquid            | >480                       |
| Chlorine Gas          | 7782-50-5     | Gas               | imm.                       |
| Dichloromethane       | 75-09-2       | Liquid            | imm.                       |
| Diethylamine          | 109-89-7      | Liquid            | imm.                       |
| Dimethyl Formamide    | 68-12-2       | Gas               | imm.                       |
| Ethyl Acetate         | 141-78-6      | Liquid            | imm.                       |
| Ethylene Oxide Gas    | 75-21-8       | Gas               | >480                       |
| n-Hexane              | 110-54-3      | Liquid            | imm.                       |
| Hydrogen Chloride Gas | 7647-01-0     | Gas               | imm.                       |
| Methanol              | 67-56-1       | Liquid            | imm.                       |
| Methyl Chloride Gas   | 74-87-3       | Gas               | imm.                       |
| Nitrobenzene          | 98-95-3       | Liquid            | 45 minutes                 |
| Sodium Hydroxide 50%  | 1310-73-2     | Liquid            | >480                       |
| Sulfuric Acid, 96%    | 7664-93-9     | Liquid            | 315 minutes                |
| Tetrachloroethylene   | 127-18-4      | Liquid            | imm.                       |
| Tetrahydrofuran       | 109-99-9      | Liquid            | imm.                       |
| Toluene               | 108-88-3      | Liquid            | imm.                       |
|                       |               |                   |                            |

#### For Fentanyl Test Results using ASTM D6978 refer to page 10

ND = None Detected

> = greater than

L = liquid


G = gas

Numbers reported are averages of samples tested by the ASTM F739 test method. Sample results vary and therefore averages for these results are reported.

#### Warnings:

- 1. ChemMax® 1 is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
- 2. Garments made of ChemMax® 1 should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.


**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

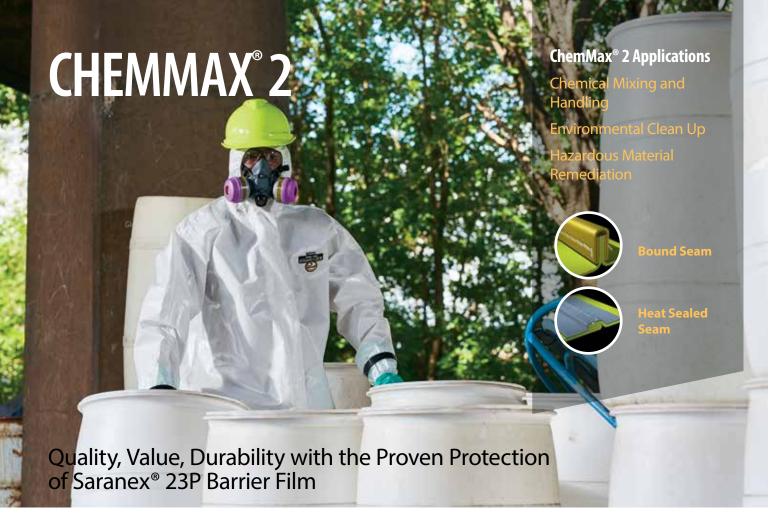

ChemMax® 2 is useful in protecting against hazardous chemicals and contaminants found in the work place and is a superior and economical chemical protective suit developed using the knowledge and expertise that you have come to expect from Lakeland®.

The unparalleled strength and softness features a Saranex® 23P film on two layers of a unique bi-component spunbond nonwoven substrate which provides protection for chemical mixing and handling, environmental clean-up, hazardous materials remediation and response, pharmaceutical manufacturing, spray painting and general industry.

#### ChemMax® 2 Coveralls

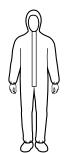


#### Coverall C2B414 **Bound Seam**

- Zipper with storm flap
- Attached hood · Attached boots
- Elastic wrists Sizes: S - 5XL Case Pack: 12



#### Coverall C2B417 **Bound Seam**

- · Zipper with storm flap
- Elastic wrists
- Elastic ankles Sizes: S - 5XL Case Pack: 12

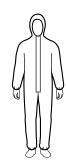

#### Coverall C2B428 **Bound Seam**

- · Zipper with storm flap
- Attached hood Elastic wrists
- Elastic ankles Sizes: S - 5XL Case Pack: 12



#### Coverall C2T110 **Sealed Seam**

- Collar
- Storm flap over zipper.
- Elastic wrists Elastic ankles Sizes: S - 5XL

Case Pack: 6



#### Coverall C2T132 **Sealed Seam**


- · Respirator fit hood
- Zipper with storm flap
- Elastic face
- Elastic wrists
- Elastic ankles Sizes: S - 5XL Case Pack: 6



#### Coverall C2T151 Sealed Seam

- · Respirator fit hood Zipper with storm
- flap
- Attached hood
- Elastic wrists Attached boots Sizes: S - 5XL

Case Pack: 6

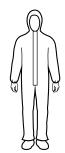

#### Coverall C2T165 **Sealed Seam**

- · Respirator fit hood
- Storm flap over zipper
- Attached boots with boot flaps
- Velcro<sup>®</sup> closure over zipper

Sizes: S – 5XL Case Pack: 6



#### ChemMax® 2 Brand Features

Moderate to high level chemical protection Bound and sealed seam configurations 2-layer (PP/PE) substrate 20% stronger than competitive fabrics

#### ChemMax® 2 Configurations



Apron C2B657 **Bound Seam** 


- Long sleeves
- Waist ties

Sizes: 28" x 53" Case Pack: 50



Apron C2T730 **Sealed Seam** 


- Long sleeves
- Elastic wrists
- · Hook and loop straps at neck
- · Material ties in back Sizes: 28" x 53" Case Pack: 12

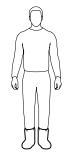

**Boot Covers** C2T740P **Sealed Seam** 


- Elastic top
- 17" high (extends over calf

Sizes: S/M, LG/XL, 2X Case Pack: 12 pair

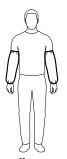

Sleeve C2B850P-18 **Bound Seam** 


 Elastic ends Sizes: 18" length Case Pack: 100 pair

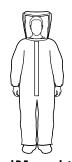

**Level B Encapsulated** Suit C2T400 - Flat Back

Rear entry

- Flat back
- 48" zipper
- Storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 1 exhaust port with
- shroud
- · Air tube inlet
- Attached sock boots with
- Suit is not gas/vapor tight Sizes: M – 4XL Case Pack: 3

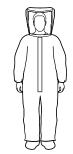

**Level B Encapsulated** Suit C2T450 **Expanded Back** 

- Rear entry
- Expanded back
- 48" zipper
- Double storm flap with hook and loop
- 20 mil Vinyl face shield
- Elastic wrists
- 2 exhaust ports with shroud
- Air tube inlet
- · Attached sock boots with boot flap
- Suit is not gas/vapor tight Sizes: M – 4XL Case Pack: 3

#### **ChemMax® 2 Fabric Physical Properties**

| Property            | Test Method     | Units      | Test Results |
|---------------------|-----------------|------------|--------------|
| Basis Weight        | ASTM D3776      | oz./sq. yd | 4.3          |
| Grab Tensile MD     | ACTIA DE024     | pounds     | 47           |
| Grab Tensile XD     | – ASTM D5034 -  | pounds     | 33.9         |
| Trapezoidal Tear MD | – ASTM D5733  - | pounds     | 29.95        |
| Trapezoidal Tear XD | - ASTMID5/33 -  | pounds     | 12.47        |
| Ball Burst          | ASTM D751       | pounds     | 48           |
| Surface Resistance  | EN1149          | Ω          | Pass         |

#### **Permeation Data for ASTM Recommended List of Chemicals for Evaluating Protective Clothing Materials** (ASTM F1001)

| Challenge Chemical    | CAS Number | Physical<br>State | Normalized<br>Breakthrough |
|-----------------------|------------|-------------------|----------------------------|
| Acetone               | 67-64-1    | Liquid            | >480                       |
| Acetonitrile          | 75-05-8    | Liquid            | 390                        |
| Ammonia Gas           | 7664-41-7  | Gas               | imm.                       |
| 1,3-Butadiene Gas     | 106-99-0   | Gas               | >480                       |
| Carbon Disulfide      | 75-15-0    | Liquid            | imm.                       |
| Chlorine Gas          | 7782-50-5  | Gas               | >480                       |
| Dichloromethane       | 75-09-2    | Liquid            | imm.                       |
| Diethylamine          | 109-89-7   | Liquid            | 165                        |
| Dimethyl Formamide    | 68-12-2    | Gas               | >480                       |
| Ethyl Acetate         | 141-78-6   | Liquid            | 21                         |
| Ethylene Oxide Gas    | 75-21-8    | Gas               | >480                       |
| n-Hexane              | 110-54-3   | Liquid            | >480                       |
| Hydrogen Chloride Gas | 7647-01-0  | Gas               | >410                       |
| Methanol              | 67-56-1    | Liquid            | >480                       |
| Methyl Chloride Gas   | 74-87-3    | Gas               | >480.                      |
| Nitrobenzene          | 98-95-3    | Liquid            | 45                         |
| Sodium Hydroxide 50%  | 1310-73-2  | Liquid            | >480                       |
| Sulfuric Acid, 98%    | 7664-93-9  | Liquid            | >480                       |
| Tetrachloroethylene   | 127-18-4   | Liquid            | >480                       |
| Tetrahydrofuran       | 109-99-9   | Liquid            | imm.                       |
| Toluene               | 108-88-3   | Liquid            | imm.                       |

ND = None Detected

> = greater than

L = liquid

G = gas

Numbers reported are averages of samples tested by the ASTM F739 test method. Sample results vary and therefore averages for these results are reported.

- 1. ChemMax® 2 is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
- 2. Garments made of ChemMax® 2 should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.





ChemMax® 2 Bound Seam coveralls now feature blue binding for easier identification.



# **DISPOSABLE FR**

#### Why Wear an FR Disposable Over Your Primary FR Clothing?

Flame resistant disposables are intended to provide liquid and dust protection when worn over a primary thermal protective garment. To keep your new, primary FR clothing clean and free of contaminants, make sure that you are selecting the correct disposable garment for your application.

Standard disposables are made from polypropylene or polyethylene (or both). These are thermoplastic derivatives of oil, both of which are flammable materials that will ignite, melt and burn. Any fabric that melts and drips in the event of an electric arc or flash fire should not be worn over primary FR garments.

Repellency is also a critical attribute to consider when selecting an FR disposable garment. Understand the repellency performance of your disposable garment to ensure that possible flammable contaminants are not soaking through to your primary FR clothing. Make sure that your FR disposable has the repellency to keep grease, hydraulic fluid and other harmful contaminants from compromising your primary protective clothing.

Don't be misled by others citing the NFPA 701 curtain and drapery standard for their flammability performance. All Pyrolon° products are designed to be worn over primary protective flame resistant clothing, are tested to ASTM F1930 and meet the NFPA 2113 requirements for section 5.1.9.

#### **Know the Facts!**

Get the FR protection you demand. Lakeland® has produced a video which demonstrates the superiority of Pyrolon® Plus 2 vs. competing fabrics. Don't settle for substandard FR PPE that can be downright dangerous to wear. Visit the Lakeland® website at www.lakeland.com, or scan the QR code on this page.







- Second generation Pyrolon® Plus 2 offers wet or dry strength superior to that provided by other traditional Flame Resistant disposables
- Meets the NFPA 2113 requirements for section 5.1.9.
- · ANSI/ISEA 203 Certified
- Pyrolon® Plus 2 is breathable, making this a cool and comfortable garment to wear.

Pyrolon® Plus 2 can be used in work environments where hazardous or non-hazardous contaminants may be present.

Pyrolon® Plus 2 is certified to the ANSI/ISEA 203-2018 American National Standard for Secondary Single-Use Flame Resistant Protective Clothing for Use Over Primary Flame Resistant Protective Clothing.

| ryiololi | rius 2 l'abilic rilysical ri operties |
|----------|---------------------------------------|
|          |                                       |

| Physical Property   | Test Method | Units      | Test<br>Results       |
|---------------------|-------------|------------|-----------------------|
| Basis Weight        | ASTM D3776  | oz./sq. yd | 2.4 oz/y <sup>2</sup> |
| Grab Tensile MD     | ASTM D5034  | lbs.       | 31.0 lbs.             |
| Grab Tensile XD     | ASTM D5034  | lbs.       | 20.0 lbs.             |
| Trapezoidal Tear MD | ASTM D5733  | lbs.       | 4.5 lbs.              |
| Trapezoidal Tear CD | ASTM D5733  | lbs.       | 5.6 lbs.              |
| Air Permeability    | ASTM D737   | cfm        | 52 cfm                |
| Char Length MD      | ASTM D6413  | inches     | 3.70 inches           |
| Char Length XD      | ASTM D6413  | inches     | 3.70 inches           |
| Ignition Point      | -           | degrees F  | 1000° F               |
| Surface Resistance  | EN1149      | Ω          | Pass                  |
|                     |             |            |                       |

#### **Pyrolon® Plus 2 Configurations**



Coverall 7412 7412B

• Zipper closure Sizes: S – 5X Case Pack: 25



Coverall 7414 7414B

- Zipper closureAttached hood
- Boots
- Elastic wrists
   Sizes: S 5X
   Case Pack: 25



Coverall 7417 7417B

- Zipper closure
- Elastic wristsElastic ankles
  - Sizes: S 5X Case Pack: 25



Coverall 7428 7428B


- Zipper closureAttached hood
- Elastic wrists
   Elastic ankles
  - Sizes: S 5X Case Pack: 25



Lab Coat 7101 7101B


- Snap closure2 pockets
- Long sleeve

Sizes: S – 5X Case Pack: 30

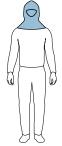

Hood 7713B

- Elastic faceCovers shoulders
- One size
- Available in Blue only
   Case Pack: 250

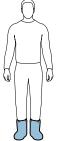

Boot Cover 7903BP

- Elastic top
- 17" highAvailable in Blue only

Sizes: S/M, L/XL, 2X Case Pack: 200 pair



Pyrolon® Plus2 coveralls and lab coats are available in White or Blue. For Blue, add an "B" to the end of the style number



Pyrolon CRFR is the Chemical Resistant and Flame Resistant disposable option designed to protect your Primary FR and ARC Rated Garments when chemical splash is a concern. Pyrolon CRFR garments bar contaminating flammables like paint, oil and grease, hazardous liquids and contaminants, and dry particulates from penetrating to inner Primary Protective Garments, potentially saturating them with flammable substances.

Pyrolon CRFR is designed to be worn over Primary FR/AR Protective Clothing for environments where flash fire is a concern. Utilizing Pyrolon CRFR when both chemical splash and flash fire are a concern helps the wearer meet the NFPA 2113 requirements for section 5.1.9.

#### **Pyrolon® CRFR Coveralls**



#### Coverall 51100

- Collar · Storm flap over
- zipper
- Open wrists Open ankles
- Hemmed cuff Sizes: S - 5XL Case Pack: 6



#### Coverall 51110

- Collar • Storm flap over
- zipper • Elastic wrists
- · Elastic ankles Sizes: S - 5XL Case Pack: 6



#### Coverall 51130

- Hood
- Storm flap over zipper
- Elastic face · Elastic wrists and
  - ankles Sizes: S - 5XL Case Pack: 6



#### Coverall 51150

- Hood • Storm flap over
- zipper • Elastic face and wrists
- · Attached boots Sizes: S - 5XL Case Pack: 6



Coverall 51166

- · Respirator fit hood
- Storm flap/hook and loop closure over zipper
- Elastic face, wrists and ankles

Sizes: S - 5XL Case Pack: 6

## Pyrolon® CRFR Brand Features:

**Combines Chemical Resistance** with Flame Resistance

**Does Not Melt or Drip** 

Meets the NFPA 2113 **Requirements for Section 5.1.9** 

Penetration Data for ASTM F903 **Standard Chemicals** 



Secondary FR and Chemical Protective Garment

Primary FR Protective Garment

#### **Pyrolon® CRFR Configurations**



#### Apron 51730

- Long sleeve
- Elastic wrists
- 32" length Sizes: S-4X Case Pack: 12



Jacket 51250


- Collar
- Elastic wrists
- Double storm flap
- Hook and loop closure

Sizes: S - 5XL Case Pack: 6



Pant 51300 Pant

- Elastic waistElastic ankles
  - Sizes: M-4X Case Pack: 6

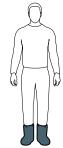

Boot Covers 51740P

- Elastic top
  - 17" high Sizes: One size Case Pack: 12 pair

#### Pyrolon® CRFR helps reduce Total Body Burn!

Pyrolon® CRFR third party testing by North Carolina State University to ASTM F1930 confirms:

| Material                                 | Body Burn Results      |
|--|------------------------|
| 6.5 oz. Westex® DH alone                 | 16.4% total body burn  |
| Pyrolon® CRFR over 6.5 oz.<br>Westex® DH | 15.84% total body burn |

#### Pyrolon® CRFR Physical Properties, 2.5 Mil

| Physical Property  | Test Method | Units       | Test<br>Results |
|--------------------|-------------|-------------|-----------------|
| Basis Weight       |             | oz./sq. yd  | 4.92            |
| Grab Tensile MD    |             | lbs.        | 34              |
| Grab Tensile XD    |             | lbs.        | 27              |
| Mullen Burst       |             | lbs./sq.in. | 35              |
| Char Length MD     |             | inches      | 4.7             |
| Char Length XD     |             | inches      | 4.5             |
| Afterflame         |             | seconds     | <2              |
| Charge Decay       | NFPA 99     |             | Pass            |
| Surface Resistance | EN1149      | Ω           | Pass            |
|                    |             |             |                 |

#### Pyrolon® CRFR Penetration Data, 2.5 Mil, ASTM F903

| Challenge Chemical                                     | CAS Number           | Physical<br>State | Penetra-<br>tion Result |
|--|----------------------|-------------------|-------------------------|
| Acetone  | 67-64-1              | Liquid            | >60                     |
| Acetonitrile   | 75-05-8              | Liquid            | >60                     |
| Benzene  | 71-43-2              | Liquid            | >60                     |
| Carbon Disulfide                                       | 75-15-0              | Liquid            | >60                     |
| Diesel Fuel  | N/A                  | Liquid            | >60                     |
| Diethylamine   | 109-89-7             | Liquid            | >60                     |
| Crude Oil  | N/A                  | Liquid            | >60                     |
| Ethyl Acetate  | 141-78-6             | Liquid            | >60                     |
| n-Hexane   | 110-54-3             | Liquid            | >60                     |
| Hexamethylene Diiso-<br>cyanate                        | 822-06-0             | Liquid            | >60                     |
| Hydrochloric Acid                                      | 7647-01-0            | Liquid            | >60                     |
| Methanol   | 67-56-1              | Liquid            | >60                     |
| Methyl Ethyl Ketone<br>(MEK)                           | 78-93-3              | Liquid            | > 60                    |
| Methyl Isobutyl Ketone                                 | 108-10-1             | Liquid            | >60                     |
| Monochlorobenzene                                      | 108-90-7             | Liquid            | >60                     |
| n-Butyl Acetate  | 123-86-4             | Liquid            | >60                     |
| Orthodichlorobenzene,<br>Grade F                       | 95-50-1              | Liquid            | >60                     |
| Polychlorinated<br>Biphenyl (PCB)                      | 92-52-4              | Liquid            | > 60                    |
| Sodium Hydroxide, 50%                                  | 1310-73-2            | Liquid            | >60                     |
| Sulfuric Acid, 98%                                     | 7664-93-9            | Liquid            | 45                      |
| Surrogate Gasoline<br>(Toulene 50%)<br>(Isooctane 50%) | 108-88-3<br>540-84-1 | Liquid            | > 60                    |
| Tetrachloroethylene                                    | 127-18-4             | Liquid            | >60                     |
| Toluene  | 108-88-3             | Liquid            | >60                     |
| Trichlorobenzene<br>Mixture                            | Mixture              | Liquid            | >60                     |
| Xylene   | 1330-20-7            | Liquid            | >60                     |
|  |                      |                   |                         |

Note: Chemical Resistance Data is in accordance with ASTM F903 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratories. All tests were performed under laboratory conditions and not actual use conditions.



Pyrolon CBFR - Advanced chemical protection and self extinguishing FR protection. Designed to be worn over primary FR protective clothing, for environments where both chemical exposures and flash fire are a concern. This advanced chemical barrier is self-extinguishing, won't melt or drip, and meets the NFPA 2113 requirements for section 5.1.9.





## **Pyrolon® CBFR Brand Features:**

Combines Advanced Chemical Barrier with Flame Resistance

Higher Chemical Hold-out Than CRFR

Chemical Permeation Data Available

Lower Predicted Body Burn when Paired with Lakeland's 6.5 oz. Westex® DH FR Coverall

ANSI/ISEA 203 for Secondary Single-Use Flame Resistant Protective Clothing for Use Over Primary Flame Resistant Protective Clothing

#### **Pyrolon® CBFR Configurations**



Coverall 52151

- Respirator-fit hoodStorm flap over
- zipper
   Elastic face and wrists
- Attached boots
   Sizes: S 5XL
   Case Pack: 6



Coverall 52132

- Respirator-fit hoodStorm flap over zipper
- Elastic face, wrists and ankles Sizes: S - 5XL

Case Pack: 6

#### **Pyrolon® CB-FR Physical Properties Physical Properties**

| Physical Property   | Test Method | Units      | Test Results |
|---------------------|-------------|------------|--------------|
| Basis Weight        | ASTM D3776  | oz./sq. yd | 7.16 oz/y2   |
| Thickness           | ASTM D1777  | mils       | 12           |
| Grab Tensile MD     | ASTM D5034  | lbs.       | 55.2 lbs.    |
| Grab Tensile XD     | ASTM D5034  | lbs.       | 42.88 lbs.   |
| Mullenburst         | ASTM D3786  | psi        | 32.5         |
| Trapezoidal Tear MD | ASTM D5587  | lbs.       | 16.28 lbs.   |
| Trapezoidal Tear CD | ASTM D5587  | lbs.       | 24.08 lbs.   |
| Surface Resistance  | EN1149      | Ω          | Pass         |

#### Pyrolon® CB-FR Permeation Testing - ASTM F1001

| Chemical                          | CAS<br>Number | Physical<br>State | Concentra<br>tion | ASTM F739 | EN 369 |
|-----------------------------------|---------------|-------------------|-------------------|-----------|--------|
| Acetone                           | 67-64-1       | Liquid            | 99%               | >480      | >480   |
| Acetonitrile                      | 75-05-8       | Liquid            | 99%               | >480      | >480   |
| Acrylonitrile                     | 107-13-1      | Liquid            | 99%               | >480      | >480   |
| Benzene                           | 71-43-2       | Liquid            | 99%               | >480      | >480   |
| Carbon Disulfide                  | 75-15-0       | Liquid            | 99%               | >480      | >480   |
| Crude Oil                         | Various       | Liquid            | Mixture           | 58        | >480   |
| Dichloromethane                   | 75-09-2       | Liquid            | 99%               | >480      | >480   |
| Diesel Fuel                       | Various       | Liquid            | Mixture           | >480      | >480   |
| Diethylamine (DEA)                | 109-89-7      | Liquid            | 99%               | 130       | 309    |
| Dimethylformamide (DMF)           | 68-12-2       | Liquid            | 99%               | >480      | >480   |
| Ethyl Acetate                     | 141-78-6      | Liquid            | 99%               | >480      | >480   |
| Gasoline                          | Various       | Liquid            | Mixture           | 138       | >480   |
| Hydroflouric Acid                 | 7664-39-3     | Liquid            | 48%               | >480      | >480   |
| n-Hexane                          | 110-54-3      | Liquid            | 99%               | >480      | >480   |
| Methanol                          | 67-56-1       | Liquid            | 99%               | 25        | 33     |
| Nitrobenzene                      | 98-95-3       | Liquid            | 99%               | >480      | >480   |
| Sodium Hydroxide, 50%             | 1310-73-2     | Liquid            | 50%               | >480      | >480   |
| Sulfuric Acid 93.1% 66°B          | 7664-93-9     | Liquid            | 93%               | >480      | >480   |
| Tetrachloroethylene (perc)        | 127-18-4      | Liquid            | 99%               | >480      | >480   |
| Tetrahydrofuran (THF)             | 109-99-9      | Liquid            | 99%               | 13        | 21     |
| Toluene                           | 108-88-3      | Liquid            | 99%               | >480      | >480   |
| Gases                             |               |                   |                   |           |        |
| Ammonia Anhydrous                 | 7664-41-7     | Gas               | 99%               | >480      | >480   |
| 1, 3-Butadiene inhibit-<br>ed 99% | 106-99-0      | Gas               | 99%               | >480      | >480   |
| Chlorine 99.5%                    | 7782-50-5     | Gas               | 99%               | >480      | >480   |
| Ethylene Oxide 99.7%              | 75-21-8       | Gas               | 99%               | >480      | >480   |
| Hydrogen Chloride<br>99%          | 7647-01-0     | Gas               | 99%               | 182       | >480   |
| Methyl Chloride 99.5%             | 74-87-3       | Gas               | 99%               | >480      | >480   |

Note: Chemical Resistance Data is in accordance with ASTM F739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratories. All tests were performed under laboratory conditions and not actual use conditions.

## Pyrolon® CB-FR Predicted Body Burn when worn over a Lakeland® 6.5 oz. Westex® DH FR Coverall (includes the head)

6.5 oz. Westex® DH coverall alone - 16.4% Total Body Burn

| Burn            | 2nd Degree | 3rd Degree | Average |
|-----------------|------------|------------|---------|
| Garment 1       | 0%         | 6.56%      | 6.56%   |
| Garment 2       | 0.82%      | 6.56%      | 7.38%   |
| Garment 3       | 2.46%      | 6.56%      | 9.02%   |
| Overall Average |            |            | 7.65%   |



PermaSURE® is a free, mobile-friendly online tool that models permeation rates and provides safe-use times by incorporating environmental, temperature and chemical exposure factors. It is a state-of-the-art technology developed initially by leading Polymer chemists for defense forces to quickly determine which suits are needed for various chemical warfare agents and dual use chemicals. It is based on the known molecular characteristics and behavior of 4000+ chemicals interacting with Lakeland's specific chemical fabrics.

- Helps determine which suit is optimal for the various chemicals used.
- Easy input of suit type, exposure time, temperature and chemical.
- Provides calculation of how much the chemical has permeated.
- Calculates safe-use time and takes into account environmental temperature and the toxicity thresholds of specific chemicals.
- Alarm sounds on mobile device when safe use time limit is being approached.
- Provides instant basic chemical hazard data and single-click links to detailed online safety data sheets.
- Over 4000 chemicals in the database.
- · Robust documentation capabilities.

## Understanding "Breakthrough" in Permeation Testing: How Long Am I Safe?

"Breakthrough" in Permeation test reports is often used to estimate a safe-use time, but according to the test standards, permeation testing is designed for fabric comparison only.

The use of permeation testing data can result in misleading conclusions about how long a worker is safe!




#### What does a permeation test tell you?

'Breakthrough' in a permeation test report is not recorded when the chemical first breaks through the fabric, but instead, when the permeation rate reaches 0.1ug/min/cm², and in the controlled environment of a lab with ambient temperature of 73° F.


# What a permeation test DOES NOT tell you:

The first actual point of 'breakthrough' or exposure may occur well before the 'breakthrough' test report indicates, especially when environmental temperatures exceed 73° Fahrenheit.

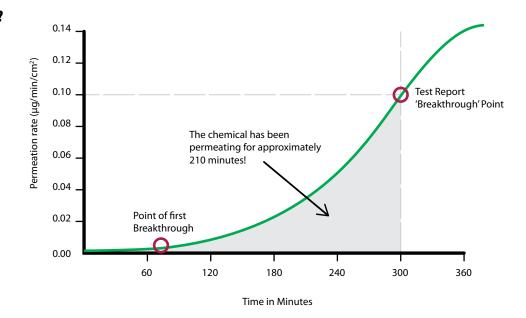

#### Does a permeation test account for the following?

- "Real World" ambient or actual suit temperature? NO
- Faster permeation at higher temperatures due to increased molecular volatility? NO
- Toxicity level of the specific chemical? NO
- Amount permeated? NO

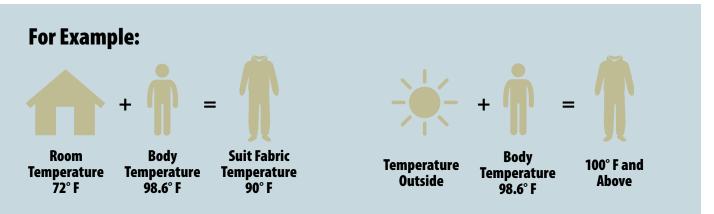

If your worker is in an environment where the room temperature is 72° Fahrenheit and his body temperature is 98.6° Fahrenheit, the temperature of the suit fabric will quickly approach 90° F. Out in the sun in the summer, suit temperature can quickly soar well over 100° F. The permeation rate of many chemicals can increase exponentially with even a modest rise in temperature of the suit fabric.

Differences in the toxicity levels of chemicals mean that similar doses can vary significantly in how harmful they are. Toxicity must be taken into account when determining safe use times.



Recent modifications to NFPA 1991 highlight a paradigm shift from using "normalized breakthrough times," to compare fabrics, to cumulative permeate. Determining the amount of cumulative permeate moves us closer to determining the dosage the wearer is being exposed to and how that should best be accounted for.

### **Permeation and Temperature:**

The concentration and temperature of a chemical plays a critical role in permeation rate.

Unless otherwise requested, all permeation testing is conducted at 73° F so that data is collected under constant conditions. This is important because the permeation test was designed and intended to be used for a relative comparison between different fabrics. This is clearly stated in the test method.

#### Important temperature considerations include:

- Higher environmental temperatures can result in accelerated breakthrough, while lower temperatures potentially can lead to a slower breakthrough for certain chemical and material combinations.
- Some chemicals are in a solid state at 73° Fahrenheit, making permeation testing data and safe-use time recommendations inapplicable.
- Work environment and body temperature, and their impact on garment temperature, are not considered when "Breakthrough" times are used as the sole indicator of safe use times.

To properly evaluate safe-use time, it is essential that you take the temperature factors for your unique working environment into consideration.

#### **How Do You Calculate A Safe-Use Time?**

Safe-use time must account for: specific chemical permeation behavior, chemical state, amount of chemical available for exposure, temperature, permeation rate, toxicity and area of suit likely to be exposed.

| 1  | Permeation Rate X  | Duration of Exposure   | Area of Suit Exposed                                   | Volume Perme-<br>ated                 |  |
|--|--|--|--|---------------------------------------|--|
| Ca <mark>lc</mark> ulate Volume Per-<br>meated | As permeation rate per<br>unit area varies over time<br>an average can be calcu-<br>lated - or use the maxi-<br>mum rate for a wide safety<br>margin   | The time the suit may<br>be exposed to the<br>chemical - how long<br>the task will take. | The total area of the suit that might be contaminated. |                                       |  |
| 7  | Is the volume permeated greater or less than the chemical toxicity l   |  |  |                                       |  |
| Compare with Chemical<br>Toxicity Limit        | Volume Permeated -<br>= SAF  | · · · · · · · · · · · · · · · · · · ·  | Volume Permeated<br>= NOT                              | · · · · · · · · · · · · · · · · · · · |  |
| 3  | Chemical State   | Room Tempera-<br>ture  | Outside Tem-<br>perature                               | Body Tempera-<br>ture                 |  |
| Consider Environmental<br>Factors              | Evaluate environmental temperature to determine the exact effects on suit temperature and how that impacts permeation for the chemical being used and calculate a more accurate safe-use time. |  |  |                                       |  |

# Lakeland's Innovative Technology Helps You Manage Risk by Accurately Monitoring Safe-Use Time

Make the best chemical protective garment selection with the ability to assess toxicity risk and better protect the health of your workers — for more than 4000 chemicals!

Traditional "breakthrough" testing data shows, that in the majority of cases, the performance of Lakeland® garments is as good or better than other brands' offerings.

Lakeland's ChemMax® 3, ChemMax® 4 Plus and Interceptor® Plus match or outperform the competition when it comes to:

- Cost
- Comfort
- Chemical Barrier
- · Design features and options

But with Lakeland's ChemMax® 3, ChemMax® 4 Plus and Interceptor® Plus, you get the added bonus of PermaSURE®.

PermaSURE® is a free, mobile-friendly online tool that models permeation rates and provides safe-use times by incorporating environmental, temperature and



chemical exposure factors. It is a state-of-the-art technology developed initially by leading Polymer chemists for defense forces to quickly determine which suits are needed for various chemical warfare agents and dual use chemicals. It is based on the known molecular characteristics and behavior of 4000+ chemicals interacting with Lakeland's specific chemical fabrics.

PermaSURE® provides users with both toxicity information and a guide as to how long one can be exposed to a chemical before harmful toxicity limits are reached. It is also an effective tool to aid safety professionals in collecting and recording the necessary documentation when an incident occurs. It allows for desktop contingency planning for spills and clean ups under varying climatic conditions so that procedures can be written for specific conditions.

#### PermaSURE® Fills a Great Need for Companies That:

- Need to know which suit is optimal for the various chemicals they use.
- For hazmat teams who may not know what the chemical is before they arrive on the scene, and must quickly determine what to wear.
- Reduces the uncertainty from variables that are not taken into account using breakthrough times or cumulative permeate, like the effect of temperature and toxicity, so that good decisions on what suit to wear and for how long are easier to make.


#### **PermaSURE® Key Features:**

- Easy input of suit type, exposure time, temperature and chemical.
- PermaSURE® provides calculation of how much the chemical has permeated.
- Calculates safe-use times and takes into account environmental temperature and the toxicity thresholds of specific chemicals.
- Alarm sounds on mobile device when safe use time limit is being approached.
- Provides instant basic chemical hazard data and single-click links to detailed online safety data sheets.
- Over 4000 chemicals in the database.
- Robust documentation capabilities.





Please contact a Lakeland® representative today to learn more about the ChemMax Plus line of products, PermaSURE® and to schedule a more detailed discussion on the benefits of choosing Lakeland® chemical protective clothing with the added safety of PermaSURE®.

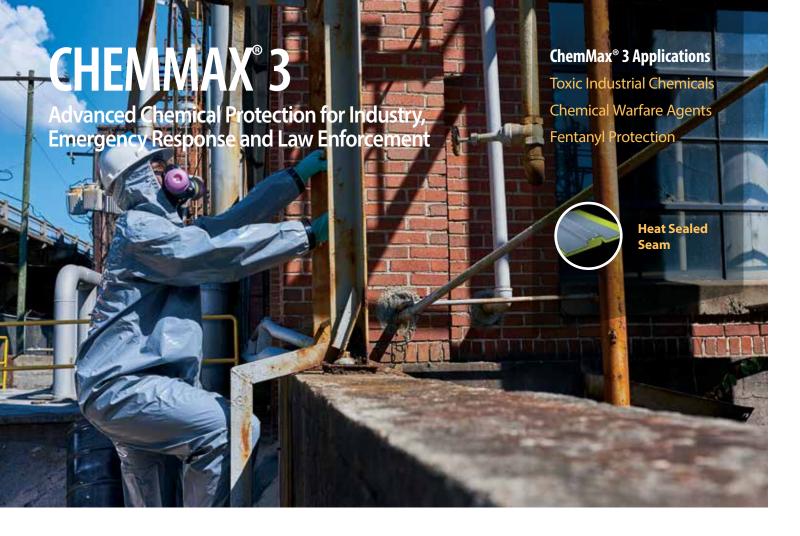

ChemMax® 3 uses the latest technology to produce a superior chemical protective product. Durable and lightweight, ChemMax® 3 provides a barrier against a broad spectrum of toxic industrial chemicals, dual-use chemicals, chemical warfare agents and other harmful contaminants.

The multi-layer film is applied to a heavy polypropylene nonwoven for increased strength and durability. The barrier film is significantly softer than other products on the market, resulting in a quiet, more comfortable garment.

#### ChemMax® 3 Coveralls



#### Coverall C3T110 Sealed Seam

- Collar
- Storm flap over zipper.
- Elastic wrists
- Elastic ankles Sizes: S – 5XL Case Pack: 6



#### Coverall C3T132 Sealed Seam

- Respirator-fit hoodZipper with storm
- flap
- Elastic faceElastic wrists
- Elastic ankles Sizes: S – 5XL Case Pack: 6



#### Coverall C3T151

- Respirator-fit hood
- Storm flap over zipper
- Elastic face
- Elastic wristsAttached boots
  - Sizes: S 5XL Case Pack: 6



#### Coverall C3T165

- Attached respirator fit bood
- tor-fit hood
- Double storm flapHook and loop
- closure
   Elastic face and
- wrists

   Attached boots with boot flaps

Sizes: S – 5XL Case Pack: 6



#### Coverall C3T166

- Respirator fit hoodDouble storm flap
- over zipper
- Elastic wrists and ankles
- Velcro® closure over zipper

Sizes: S – 5XL Case Pack: 6





#### ChemMax® 3 Brand Features

**Excellent chemical barrier** 

Chemical warfare agent tested

Fabric is lighter weight and more flexible than all major competitors

#### ChemMax® 3 Configurations



#### **Encapsulated Suit** C3T400

- · Rear entry/Flat back
- 48" zipper/Storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 1 exhaust port/shroud
- Air tube inlet
- Attached sock boots with boot flap
- Suit is not gas/vapor tight Sizes: S – 5XL Case Pack: 1



**Encapsulated Suit** C3T450 - Level B

- Rear entry
- Expanded back
- 48" zipper
- Double storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 2 exhaust ports/shroud
- Attached sock boots with boot flap
- Suit is not gas/vapor tight Sizes: S – 5XL Case Pack: 1



Hood Long Bib Style C3T716

- Long Bib Style
- 20 mil Vinyl lens
- 1" hook and loop side straps

Case Pack: 250



C3T250


- Collar
- Elastic wrists
- Double storm flap
- Hook and loop closure Sizes: S - 5XL Case Pack: 6



Pant C3T320

- Elastic waist
- · Elastic ankles

Sizes: M-4X Case Pack: 6

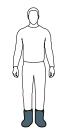

**Boot Covers** C3T740P

- Elastic top
- 17" high

Sizes: One size Case Pack: 12 pair

#### **ChemMax® 3 Physical Properties**

| Property            | Test Method     | Units      | Test Results |
|---------------------|-----------------|------------|--------------|
| Basis Weight        | ASTM D3776      | oz./sq. yd | 4.5          |
| Grab Tensile MD     | – ASTM D5034  - | pounds     | 58.7         |
| Grab Tensile XD     | - ASTMID5034 -  | pounds     | 42.2         |
| Trapezoidal Tear MD | – ASTM D5733 -  | pounds     | 25.6         |
| Trapezoidal Tear XD | - ASTIVID5/33 - | pounds     | 19.8         |
| Ball Burst          | ASTM D751       | pounds     | 54.5         |
| Surface Resistance  | EN1149          | Ω          | Pass         |

#### Permeation Data for ASTM Recommended List of Chemicals for Evaluating Protective Clothing Materials (ASTM F1001)

| Challenge Chemical    | CAS Number | Physical<br>State | Normalized<br>Breakthrough |
|-----------------------|------------|-------------------|----------------------------|
| Acetone               | 67-64-1    | Liquid            | >480                       |
| Acetonitrile          | 75-05-8    | Liquid            | 160                        |
| Ammonia Gas           | 7664-41-7  | Gas               | >480                       |
| 1,3-Butadiene Gas     | 106-99-0   | Gas               | >480                       |
| Carbon Disulfide      | 75-15-0    | Liquid            | 178                        |
| Chlorine Gas          | 7782-50-5  | Gas               | >480                       |
| Dichloromethane       | 75-09-2    | Liquid            | >480                       |
| Diethylamine          | 109-89-7   | Liquid            | imm.                       |
| Dimethyl Formamide    | 68-12-2    | Gas               | >480                       |
| Ethyl Acetate         | 141-78-6   | Liquid            | >480                       |
| Ethylene Oxide Gas    | 75-21-8    | Gas               | >480                       |
| n-Hexane              | 110-54-3   | Liquid            | >480                       |
| Hydrogen Chloride Gas | 7647-01-0  | Gas               | >480                       |
| Methanol              | 67-56-1    | Liquid            | 180                        |
| Methyl Chloride Gas   | 74-87-3    | Gas               | >480.                      |
| Nitrobenzene          | 98-95-3    | Liquid            | 45                         |
| Sodium Hydroxide, 50% | 1310-73-2  | Liquid            | >480                       |
| Sulfuric Acid, 98%    | 7664-93-9  | Liquid            | >480                       |
| Tetrachloroethylene   | 127-18-4   | Liquid            | >480                       |
| Tetrahydrofuran       | 109-99-9   | Liquid            | 320                        |
| Toluene               | 108-88-3   | Liquid            | >480                       |
|                       |            |                   |                            |

ND = None Detected

> = greater than

L = liquid

Numbers reported are averages of samples tested by the ASTM F739 test method. Sample results do vary and therefore averages for these results are reported.

- 1. ChemMax® 3 is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
- 2. Garments made of ChemMax® 3 should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

Powered By ParmaSURE



ChemMax 4 Plus is the next generation of ChemMax® 4 fabrics and provides a new gateway to extensive chemical data like you've never had before. ChemMax 4 Plus is superior, advanced chemical protection, and is at the top-of-the-line for chemical protective clothing. Constructed with a 6-layer protective system, it will stand up to the toughest and most hazardous chemical environments.

ChemMax 4 Plus products offer heat sealed seams with a range of configurations including coveralls with respirator-fit hoods and encapsulated suits, all compatible with the PermaSURE® Toxicity Risk Modeller.

# CHEMMAX 4 PLUS What's All The Fuss About Plus?! Advanced Engineering, that's what! ChemMax® 4 Plus has a chemical barrier that gives higher holdout times than our previous ChemMax® 4 material! Lakeland's 6 Layer Protective System stands up to the toughest and most hazardous chemical environments!

#### ChemMax® 4 Plus Encapsulated Configurations



#### Level B Encapsulated Suit C4T400Y

- Rear entry
- Flat back
- 48" zipper
- Double storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 1 exhaust port with shroud
- Air tube inlet
- · Attached sock boots with boot flap
- Suit is not gas/vapor tight

Sizes: M – 4XL Case Pack: 3



#### Level B Encapsulated Suit C4T450T – Tan C4T450Y – Yellow

- Rear entry
- Expanded back
- 48" zipper
- Double storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 2 exhaust ports with shroud
- Air tube inlet
- Attached sock boots with boot flap
- Suit is not gas/vapor tight

Sizes: M – 4XL Case Pack: 3

Available Colors: Yellow and Tan



#### ChemMax® 4 Plus Configurations



Coverall C4T110T

- Collar
- · Storm Flap over Zipper
- Elastic Wrists and Ankles Sizes: S - 5X Case Pack: 6



Coverall C4T132T - Tan C4T132Y – Yellow

- Respirator Fit Hood
- Storm Flap over zipper
- · Elastic face, wrists and **Ankles**

Sizes: S - 5X Case Pack: 6



Coverall C4T151T - Tan C4T151Y - Yellow

- · Respirator-fit hood
- Storm flap over zipper
- Elastic face and wrists
- Attached boots Sizes: S – 5X Case Pack: 6



Coverall C4T165T - Tan C4T165Y - Yellow

- · Attached respirator-fit hood
- Double storm flap Hook and loop closure
- Elastic face and wrists
- · Attached boots with boot flaps


Sizes: S – 5X Case Pack: 6



Coverall C4T166T

- · Respirator Fit Hood
- Double storm flap
- Hook and loop closure
- Elastic Wrists and Ankles Sizes: S - 5X

Case Pack: 6

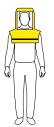

**Hood Short Bib Style** C4T714Y

• 20 mil Vinyl lens Sizes: One Size Case Pack: 6



**Boot Covers C4T740YP** 

• Elastic top Sizes: One Size Case Pack: 12 pair

#### ChemMax® 4 Plus Physical Properties

| Property            | Test Method  | Units      | Test Results |
|---------------------|--------------|------------|--------------|
| Basis Weight        | ASTM D3776   | oz./sq. yd | 7.5          |
| Grab Tensile MD     | — ASTM D5034 | pounds     | 93.4         |
| Grab Tensile XD     | A31W D3034   | pounds     | 80.3         |
| Trapezoidal Tear MD | — ASTM D5733 | pounds     | 24.4         |
| Trapezoidal Tear XD | — ASTM D5/33 | pounds     | 18.7         |
| Ball Burst          | ASTM D751    | pounds     | 83           |
| Surface Resistance  | EN1149       | Ω          | Pass         |

#### ChemMax® 4 Plus Permeation Testing - ASTM F1001

|                       |               | _                 |                            |
|-----------------------|---------------|-------------------|----------------------------|
| Challenge Chemical    | CAS<br>Number | Physical<br>State | Normalized<br>Breakthrough |
| Acetone               | 67-64-1       | Liquid            | >480                       |
| Acetonitrile          | 75-05-8       | Liquid            | >480                       |
| Ammonia Gas           | 7664-41-7     | Gas               | >480                       |
| 1,3-Butadiene Gas     | 106-99-0      | Gas               | >480                       |
| Carbon Disulfide      | 75-15-0       | Liquid            | >480                       |
| Chlorine Gas          | 7782-50-5     | Gas               | >480                       |
| Dichloromethane       | 75-09-2       | Liquid            | >480                       |
| Diethylamine          | 109-89-7      | Liquid            | >480                       |
| Dimethyl Formamide    | 68-12-2       | Gas               | >480                       |
| Ethyl Acetate         | 141-78-6      | Liquid            | >480                       |
| Ethylene Oxide Gas    | 75-21-8       | Gas               | >480                       |
| n-Hexane              | 110-54-3      | Liquid            | >480                       |
| Hydrogen Chloride Gas | 7647-01-0     | Gas               | >480                       |
| Methanol              | 67-56-1       | Liquid            | >480                       |
| Methyl Chloride Gas   | 74-87-3       | Gas               | >480.                      |
| Nitrobenzene          | 98-95-3       | Liquid            | >480                       |
| Sodium hydroxide, 50% | 1310-73-2     | Liquid            | >480                       |
| Sulfuric Acid, 98%    | 7664-93-9     | Liquid            | >480                       |
| Tetrachloroethylene   | 127-18-4      | Liquid            | >480                       |
| Tetrahydrofuran       | 109-99-9      | Liquid            | >480                       |
| Toluene               | 108-88-3      | Liquid            | >480                       |
|                       |               |                   |                            |

 $ND = None Detected \mid > = greater than \mid L = liquid \mid G = gas$ 

Numbers reported are averages of samples tested by the ASTM F739 test method. Sample results do vary and therefore averages for these results are reported.

- 1. ChemMax® 4 Plus is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
- 2. Garments made of ChemMax® 4 Plus should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.

Note: Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.







Interceptor® Plus is the apex of Lakeland® Industries' chemical protective clothing line. Available in both Level A encapsulating, as well as non-encapsulating configurations, there is an Interceptor® Plus style for your needs be it gas, vapor, aerosol, liquids, harmful contaminants or particulate protection.

This next generation of Interceptor® fabric is now compatible with the PermaSURE® Toxicity Risk Modeller, giving you access to the most comprehensive chemical database in the industry.



PTFE visor process permanently seals the visor into the suit with no sewing involved so that liquids can't penetrate the visor edge

PTFE outer layer on visor prevents impairment of vision due to chemical contact

Attached gloves include non-reversing Silver Shield® inner glove with Butyl outer glove

Available in CE Type 1 certified Level A as well as non-encapsulating configurations



#### Interceptor® Plus Configurations



#### INT640B INT640WB - Wide-View Face Shield

Blue CE Type 1:EN943:2005 Vapor tight (Level A) Deluxe Encapsulating Suit

- Fully encapsulated
- · Front-entry
- Storage bag included Available in wide-view face shield configuration as PS80640W.

Sizes: S – 5X Case Pack: 1



#### INT650B INT650WB - Wide-View Face Shield

Blue CE Type 1:EN943:2005 Vapor tight (Level A) Deluxe Encapsulating Suit

- Fully encapsulated
- Rear-entry
- Storage bag included Available in wide-view face shield configuration as PS80650W.

Sizes: S – 5X Case Pack: 1



#### Interceptor Training Suit INT491B (Rear Entry) INT497B (Front Entry)

Encapsulated front or rear entry expanded back training suit.

- 20 Mil Vinvl lens
- 48" non separator cloth zipper that zips from bottom to top
- Zipper is reinforced at top and bottom with webbing on the outer side
- Double storm flap
- Exhaust port on back right side of hood
- 1 exhaust port on left back side of body
- Sock boots
- · Boot flaps sewn on
- Vinyl gloves sewn on
- Internal belt loops and assembled belt
- No hem on splash guard or dump valve covers.

Training Use Only! Case Pack: 1



#### INT620B

- Flat back front entry vapor-protective suit (Level A)
- Sealed seams on outside
- 48" zipper, double storm flap with hook and loop
- 2-layer faceshield (10 mil Teflon/40 mil Vinyl)
- Butyl gloves
- 2 exhaust valves
- Attached sock boots with boot flaps
- 1.5" waist belt with 3 belt loops sewn (inside) and sealed
- Storage bag included
   Sizes: S 5X
   Case Pack: 1



#### Coverall INT165B

- Attached respirator-fit hoodDouble storm flap
- Hook and loop closure
- Elastic face and wrists
- Attached boots with boot

flaps
Sizes: S – 5X

Case Pack: 3

#### Coverall INT166B

- Respirator Fit HoodDouble Storm Flap with hook
- Double Storm Flap with hool and loop closure
- Elastic Wrists / Ankles

Sizes: S – 5X Case Pack: 3

#### Interceptor® Plus Physical Properties

| Physical Property   | Test Method | Units      | Test<br>Results |
|---------------------|-------------|------------|-----------------|
| Basis Weight        | ASTM D3776  | oz./sq. yd | 11              |
| Grab Tensile MD     | ASTM D5034  | lbs.       | 218.5 lbs.      |
| Grab Tensile XD     | ASTM D5034  | lbs.       | 170.4 lbs.      |
| Trapezoidal Tear MD | ASTM D5733  | lbs.       | 34.7 lbs.       |
| Trapezoidal Tear CD | ASTM D5733  | lbs.       | 38.7 lbs.       |
| Ball Burst          | ASTM D3787  | lbs.       | 250 lbs.        |

#### Interceptor® Plus Permeation Testing - ASTM F1001

| Chemical Name              | Physi-<br>cal<br>Phase | Normalized<br>Breakthrough<br>Time (min.) | CAS No.   |
|----------------------------|------------------------|---|-----------|
| Acetone                    | L                      | >480                                      | 67-64-1   |
| Acetonitrile               | L                      | >480                                      | 75-05-8   |
| Ammonia (gas)              | G                      | >480                                      | 7664-41-7 |
| 1,3- Butadiene             | G                      | >480                                      | 106-99-0  |
| Carbon disulfide           | L                      | >480                                      | 75-15-0   |
| Chlorine gas               | G                      | >480                                      | 7782-50-5 |
| Dichloromethane            | L                      | >480                                      | 75-09-2   |
| Diethylamine               | L                      | >480                                      | 109-89-7  |
| N,N-Dimethylforma-<br>mide | L                      | >480                                      | 68-12-2   |
| Ethyl acetate              | L                      | >480                                      | 141-78-6  |
| Ethylene oxide             | G                      | >480                                      | 75-21-8   |
| n-Hexane                   | L                      | >480                                      | 110-54-3  |
| Hydrogen chloride          | G                      | >480                                      | 7647-01-0 |
| Methanol                   | L                      | >480                                      | 67-56-1   |
| Methyl chloride            | G                      | >480                                      | 74-87-3   |
| Nitrobenzene               | L                      | >480                                      | 98-95-3   |
| Sodium hydroxide, 50%      | L                      | >480                                      | 1310-73-2 |
| Sulfuric acid (conc.)      | L                      | >480                                      | 7664-93-9 |
| Tetrachloroethylene        | L                      | >480                                      | 127-18-4  |
| Tetrahydrofuran            | L                      | >480                                      | 109-99-9  |
| Toluene                    | L                      | >480                                      | 108-88-3  |

> = greater than, L = liquid, G = gas

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.



## **Chemical Suit Options and Accessories**



#### Lakeland® ChemMax® Push-Lock® Glove System

Quickly Install Or Remove Chemical Gloves On Lakeland® ChemMax® or Interceptor® Plus Suits!

The Lakeland® ChemMax® **Push-Lock® Glove System** is a simple method of attaching most types of chemical gloves to the garment sleeve through the use of two concentric rings. The system has been fully tested to a CE Type 3 Jet Test and is certified for use with all Lakeland® ChemMax® and Interceptor® Plus chemical protective coveralls. Lakeland's Push-Lock® Glove System is reusable and may need decontamination before reuse.

Lakeland® item number JFR2 contains one set of Push-Lock® rings, and will secure one pair of gloves to any Lakeland® chemical protective coverall.





#### **Level A Test Kit**

Maintain your encapsulated suits with this easy to use test kit. Kit features an easy-to-read Magnehelic pressure gauge, digital timer, sturdy brass and steel fittings, hoses and connectors in a waterproof case. Complete instructions included.

Part No. PTK10 — Level A Test Kit

Part No. PTK17 — Adapters for DuPont test kit to test

Lakeland® suits.

Part No. PTK220 – International Universal test kit. Convertible to 220V and 110V.

#### **Options for Chemical Suits**

| Part Number | Description   |
|-------------|---|
| T-LEGBAND   | Reflective triple trim 1.5" L/Y around legs                               |
| T-ARMBAND   | Reflective triple trim 1.5" L/Y around arms                               |
| A1          | Add 1 side air tube   |
| G5          | Seal-tight glove system   |
| G6          | North Silvershield® gloves heat sealed to suit                            |
| G12         | Push-Fit glove system includes 2 inserts and 2 rings                      |
| GA          | Glove O-ring and clamp assembly   |
| l1          | Inspect, retest, and re-certify Level A suit*                             |
| I2          | Install customer supplied pass-thru                                       |
| P1          | Scott® pass-thru with Hanson® fittings (NFPA approved on ensembles)       |
| P2          | Scott® pass-thru with Schrader® fittings (NFPA approved on ensembles)     |
| P3          | Standard pass-thru (not NIOSH approved)                                   |
| P4          | Survivair® pass-thru with Hanson® fittings (NFPA approved on ensembles)   |
| P5          | Survivair® pass-thru with Schrader® fittings (NFPA approved on ensembles) |
| P6          | Draegar pass-thru with Hanson® fittings (NFPA approved on ensembles)      |
| P7          | Draegar pass-thru with Foster® fittings (NFPA approved on ensembles)      |

<sup>\*</sup>Recertification of Level A Suits - Suits must NEVER have been used in an incident, for training, or exposed to ANY contaminants. Contact Customer Service prior to return for authorization at 1-800-645-9291.

#### Accessories for Interceptor Plus Level A Suits and ChemMax® Level B/C Suits

| Part Number | Description   | Part Number | Description  |
|-------------|---|-------------|--|
| RM00389     | Vinyl glove ring  | V14         | Exhaust valve  |
| RM00391     | Vinyl glove insert  | PTK17       | Adapter for DuPont test kit to pressure test Lakeland® Level A suits   |
| RM00372     | 25 mil Butyl gloves   | BG750       | Level A storage bag  |
| RM00375     | 17 mil Butyl Glove  | BG760       | Lakeland® Utility Bag (Small)  |
| RM00376     | North Silvershield gloves   | CV55        | Lakeland® Phase-Change Cooling<br>Vest includes phase change<br>inserts<br>(One Size) Poly Cotton Outershell |
| JFR2        | Push-Fit glove system includes 2 inserts and 2 rings  | CV56        | Lakeland® Phase-Change Cooling<br>Vest includes phase change<br>inserts<br>(One Size) Banox Outershell       |
| 45P         | Onguard EZ Fit Hazmax® Boots<br>Sized S-XL (NFPA Certified)   | CV58        | Lakeland® Phase-Change Cooling<br>Vest includes phase change<br>inserts (One Size) Nomex®<br>Outershell      |
| 46P         | Tingley® Hazmat Boots Sized 7-13<br>(NFPA Certified)  | CV57        | Lakeland® Phase change inserts -<br>set of 4 replacement packs   |
| PTK10       | Test kit for Level A suit   |             |  |
| PTK220      | Universal Pressure test kit with<br>blower (will test Lakeland®, Du-<br>Pont & Kappler Level A suits) |             |  |

#### **TRAINING SUITS**

## ChemMax® 1Encapsulated Training Suit C55450RE

ChemMax® 1 Encapsulated Training Suit, back entry, expanded back, Mylar® lens, bound seams. **Training**Use Only!

Case Pack: 6



#### **TRAINING SUITS**

#### Encapsulated Nylon Training Suit 95494 (Rear Entry) 95493 (Front Entry)

Encapsulated Nylon Training Suit, expanded back, sewn seams, 20 mil Vinyl faceshield, single storm flap, butyl gloves, 2 exhaust ports, attached sock boots.

Training Use Only! Case Pack: 1



# Phase Change Cool Vest











# Your First Line of Defense in Protective Apparel



Protect Your People®

#### In the USA

Toll Free: 800-645-9291 Voice: 256-350-3873 Fax: 256-350-0773 Email: info@lakeland.com















